


Wheels and Tires - Tire Pressure Monitoring System (TPMS) Rear Antenna

Removal and Installation


Removal

1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the rear wheel and tire.

3. Remove the tire pressure antenna.
 - Disconnect the electrical connector.
 - Remove the 2 retainers.

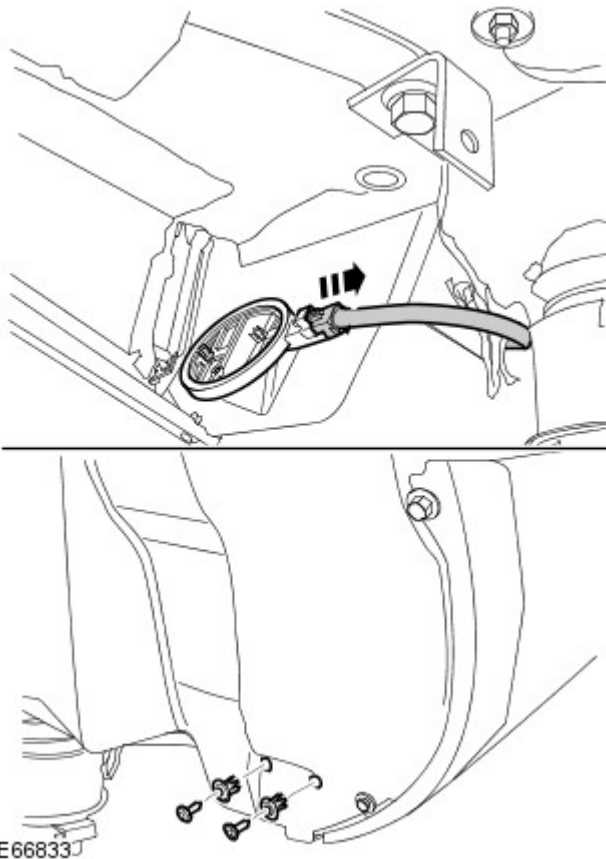

Installation

1. To install, reverse the removal procedure.
2. Install the wheel and tire.
 - Tighten the wheel nuts to 140 Nm (103 lb.ft).
3. Initiate a new tire pressure antenna using T4.