

## Auxiliary Heating - Auxiliary Heater Remote Transmitter Programming

General Procedures

### Activation



NOTE: A second or third hand held transmitter can be programmed using this method.



E135001

#### 1. NOTES:




Use a coin or similar implement to remove and install the battery cover.



Make sure that correct battery polarity is maintained.


Remove and install the transmitter battery.

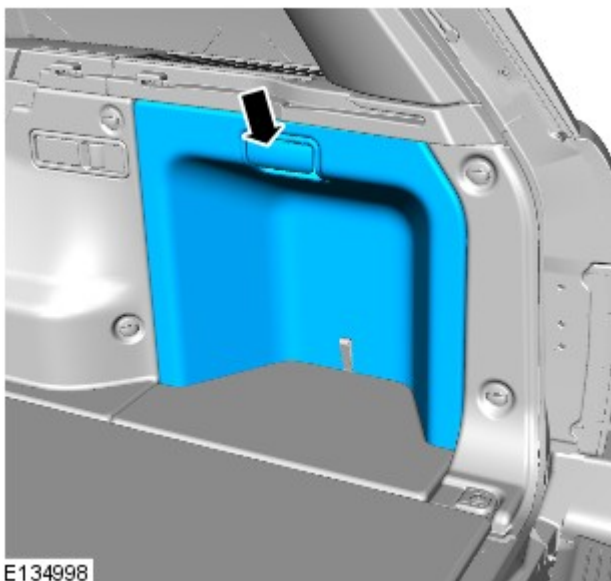

E134998

#### 2.

3. Remove fuse 16 (5 Amp) from the rear loadspace fuse box.

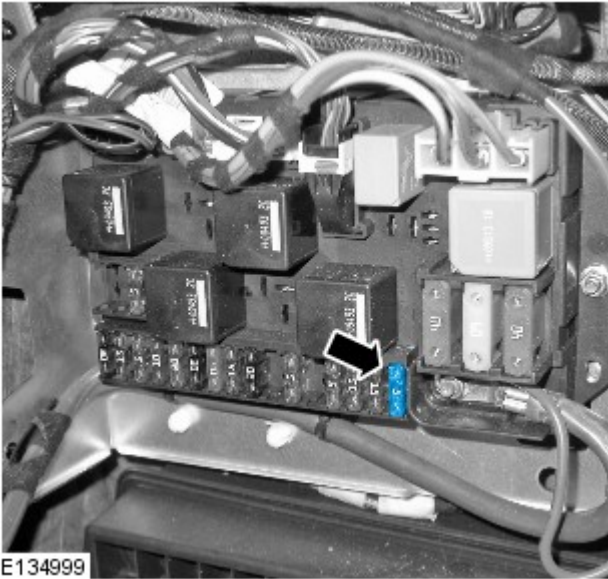

E134999



E134984

4.  **NOTE:** This completes the programming procedure.

Install fuse 16 (5 Amp), and within 5 seconds press the OFF button on the transmitter for at least 1 second.

5. To confirm whether the programming procedure has completed correctly, push the off button. If a continuous red light is displayed on the transmitter, the programming procedure was successful. If a flashing red light is displayed, the procedure was unsuccessful, or the transmitter is not in range. In this case, make sure the transmitter is within the recommended range and repeat the above procedure from step 4.