

# Entering the vehicle



**Before operating the tailgate, make sure that anyone in the vicinity does not have any part of their body in a position where it could be trapped. Note that the 'soft close' action does not incorporate object detection. Death or serious injury could occur, even with an object detection system.**

Object detection while opening: If an object is detected that would interfere with the tailgate opening, tailgate movement will stop. Remove any obstructions and press the tailgate switch again to open.

Object detection while closing: If an object is detected that would interfere with a tailgate closing, tailgate movement will stop and then reverse to the fully open position, if able to do so. An audible warning will be given to indicate a mislock. Remove any obstructions and if the tailgate is open, press the tailgate switch again to close the tailgate. If the tailgate is not open, press a tailgate release switch to open the tailgate, remove any obstructions. Once the obstructions have been removed, press the tailgate close switch to close the tailgate.



While the tailgate is open, the locking platform and latch are exposed. Do not manually close the latch, as it may also automatically 'soft close' and trap items or body parts.

## TAILGATE OPENING HEIGHT

It is possible to set the maximum height to which a powered upper tailgate will open. This is useful in parking areas with very low roofs, or just for ease of use.

1. Open the upper tailgate to the position you want to set as the maximum height. Press either upper tailgate mounted button to stop movement, or position the upper tailgate manually.

2. Make sure the upper tailgate is stationary for at least 3 seconds.
3. To set the opening height: Press and hold the tailgate close button, mounted on the upper tailgate, until you hear a chime.
4. Press and release the tailgate close button to close the tailgate. Open the tailgate again to check the upper tailgate opens to the programmed height.

**Note:** *If, after performing part 3 of the process, the upper, or upper and lower tailgates close automatically, the required height has not been set. Repeat the process making sure that all steps are adhered to.*

To reset the maximum opening height to full, repeat the process, but manually move the upper tailgate to the fully open position before pressing and holding the tailgate close button.

The powered tailgate may lose its position memory if there are multiple object detections, or if the battery voltage is low. Powered operation may be inhibited.

### To reset the tailgate:

1. Manually close the tailgate.
2. Press a tailgate release button.
3. Allow the tailgate to power fully open or to the previously set position.
4. Press and release the tailgate close button.
5. Allow the tailgate to power close fully.

The tailgate programmed position memory will now be restored.