


Exhaust System - TDV8 4.4L Diesel - Diesel Particulate Filter (DPF)

Removal and Installation

Special Tool(s)

 E130266	100-051 Cutter, Exhaust Pipe
--	---------------------------------

Removal



WARNING: Observe due care when working near a hot exhaust system.




NOTE: Removal steps in this procedure may contain installation details.




1.  **WARNING:** Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Torque: 10 Nm

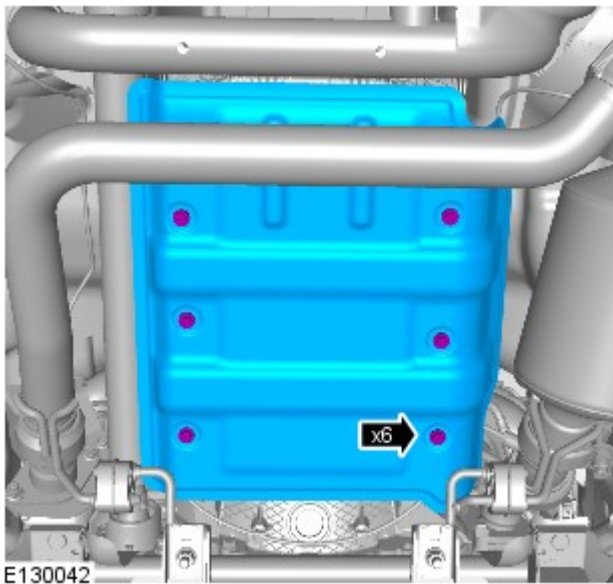

- 3.

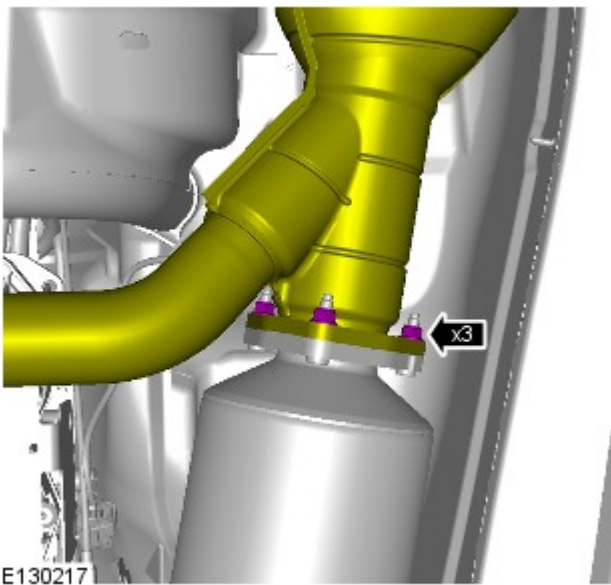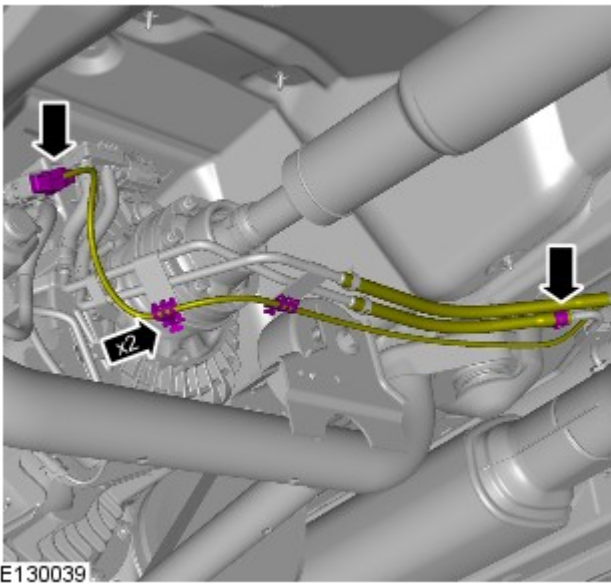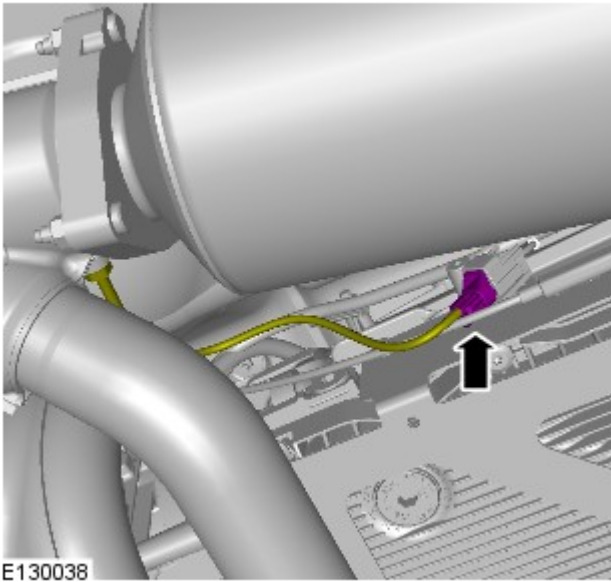


4.



5.  CAUTION: Make sure that the exhaust system is supported with suitable retaining straps.


Torque: 30 Nm

6.


 CAUTION: Make sure that the exhaust system is supported with suitable retaining straps.

Special Tool(s): [100-051](#)

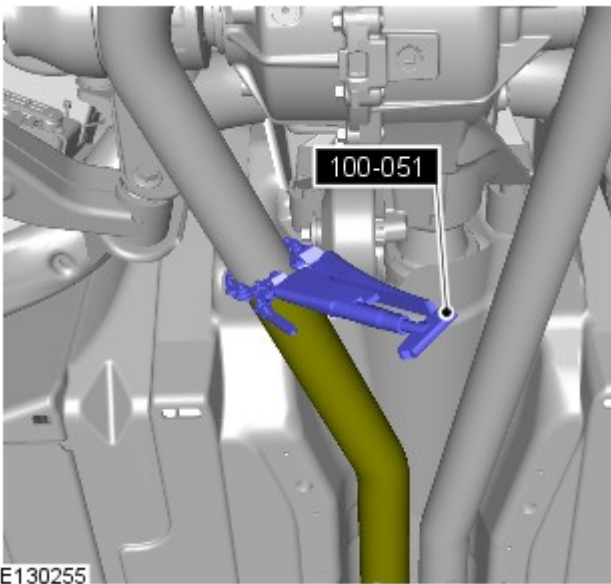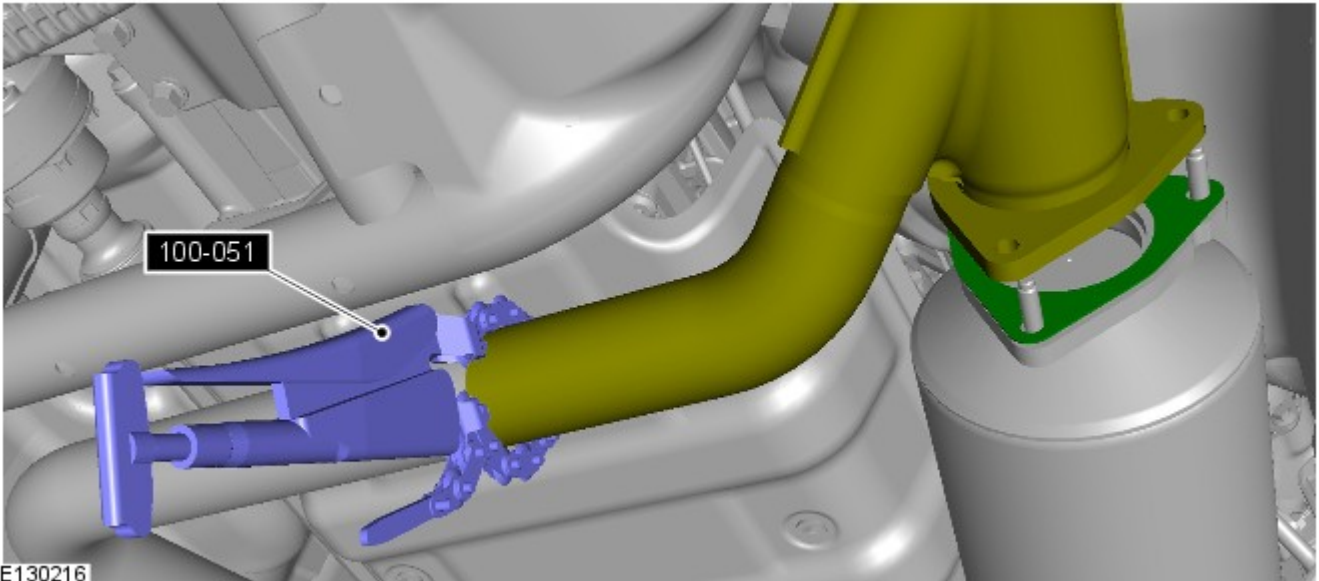


7.  CAUTION: Make sure that the exhaust system is supported with suitable retaining straps.


Special Tool(s): [100-051](#)

8.  CAUTION: Make sure that the exhaust system is supported with suitable retaining straps.


Special Tool(s): [100-051](#)

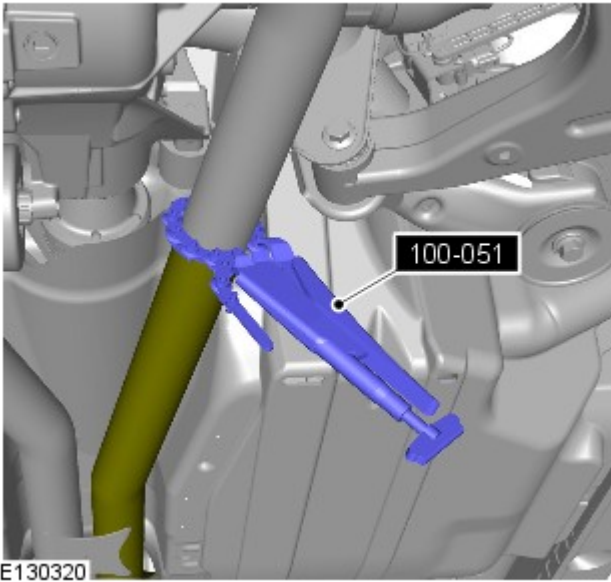


9.

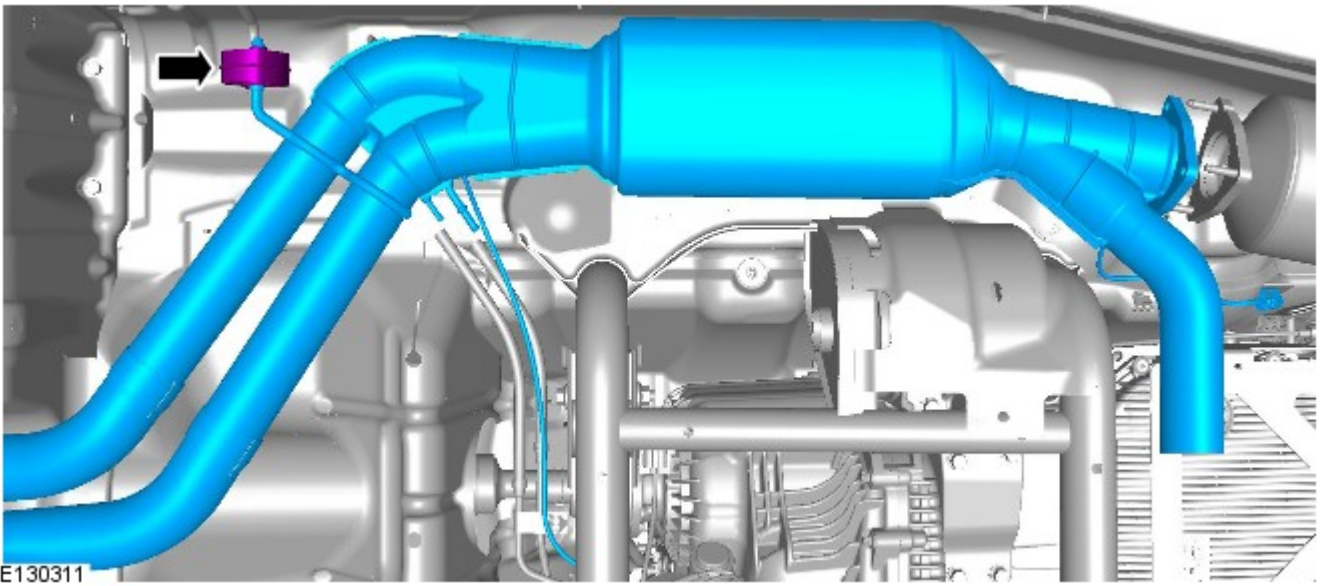

10.  NOTE: Do not disassemble further if the component is removed for access only.

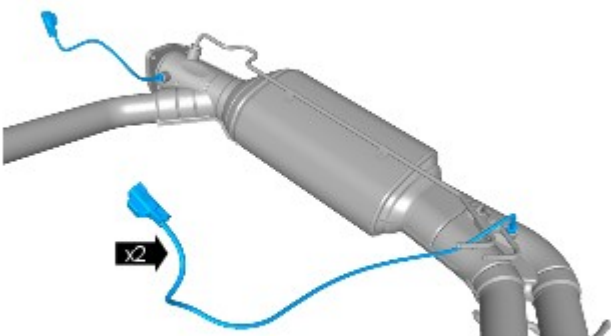


Installation

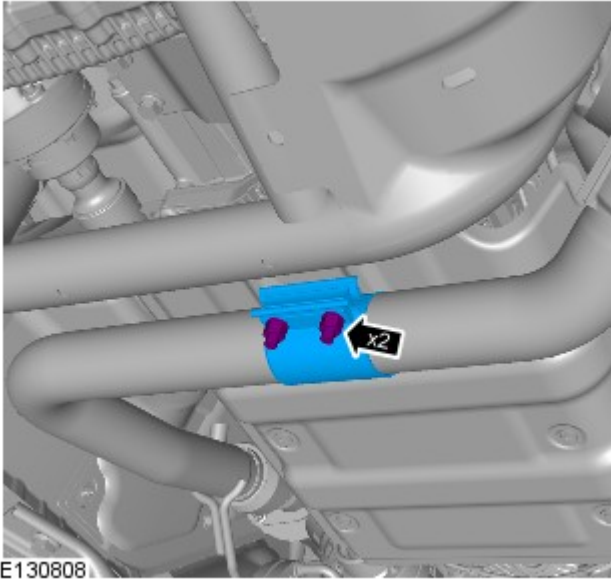

1. To install, reverse the removal procedure.

Torque: 55 Nm

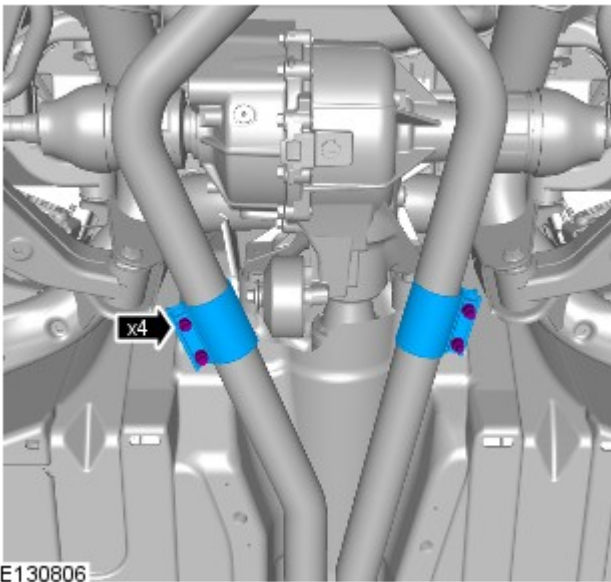

2. *Torque:* 55 Nm

3. If a new unit is installed, configure using the approved diagnostic tool.