


Wheels and Tires - Tire Pressure Monitoring System (TPMS) Front Antenna


Removal and Installation

Removal


1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Remove the front wheel.

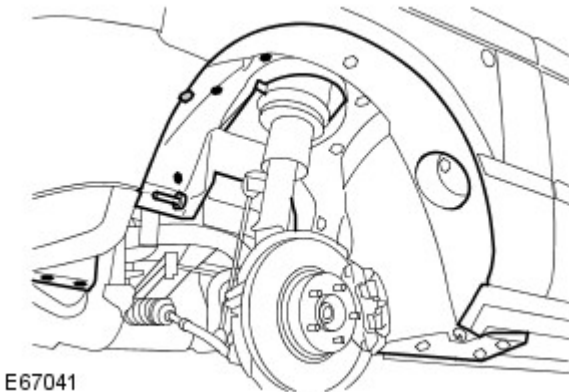

3. Release the front of the fender splash shield.
 - Remove the plastic nut.
 - Remove the 6 screws.

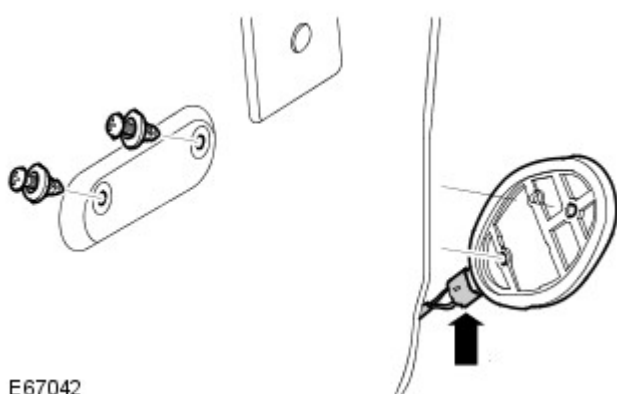

4. Remove the tire pressure antenna.
 - Disconnect the electrical connector.
 - Release the 2 clips.

Installation

1. Install the tire pressure antenna.
 - Install the 2 clips.
 - Connect the electrical connector.
2. Secure the fender splash shield.
 - Tighten the screws.
 - Tighten the nut.
3. Install the front wheel.
 - Tighten the wheel nuts to 140 Nm (103 lb.ft).