




BM41-70092-1-A-01-06-Service (0322-11M)-0001

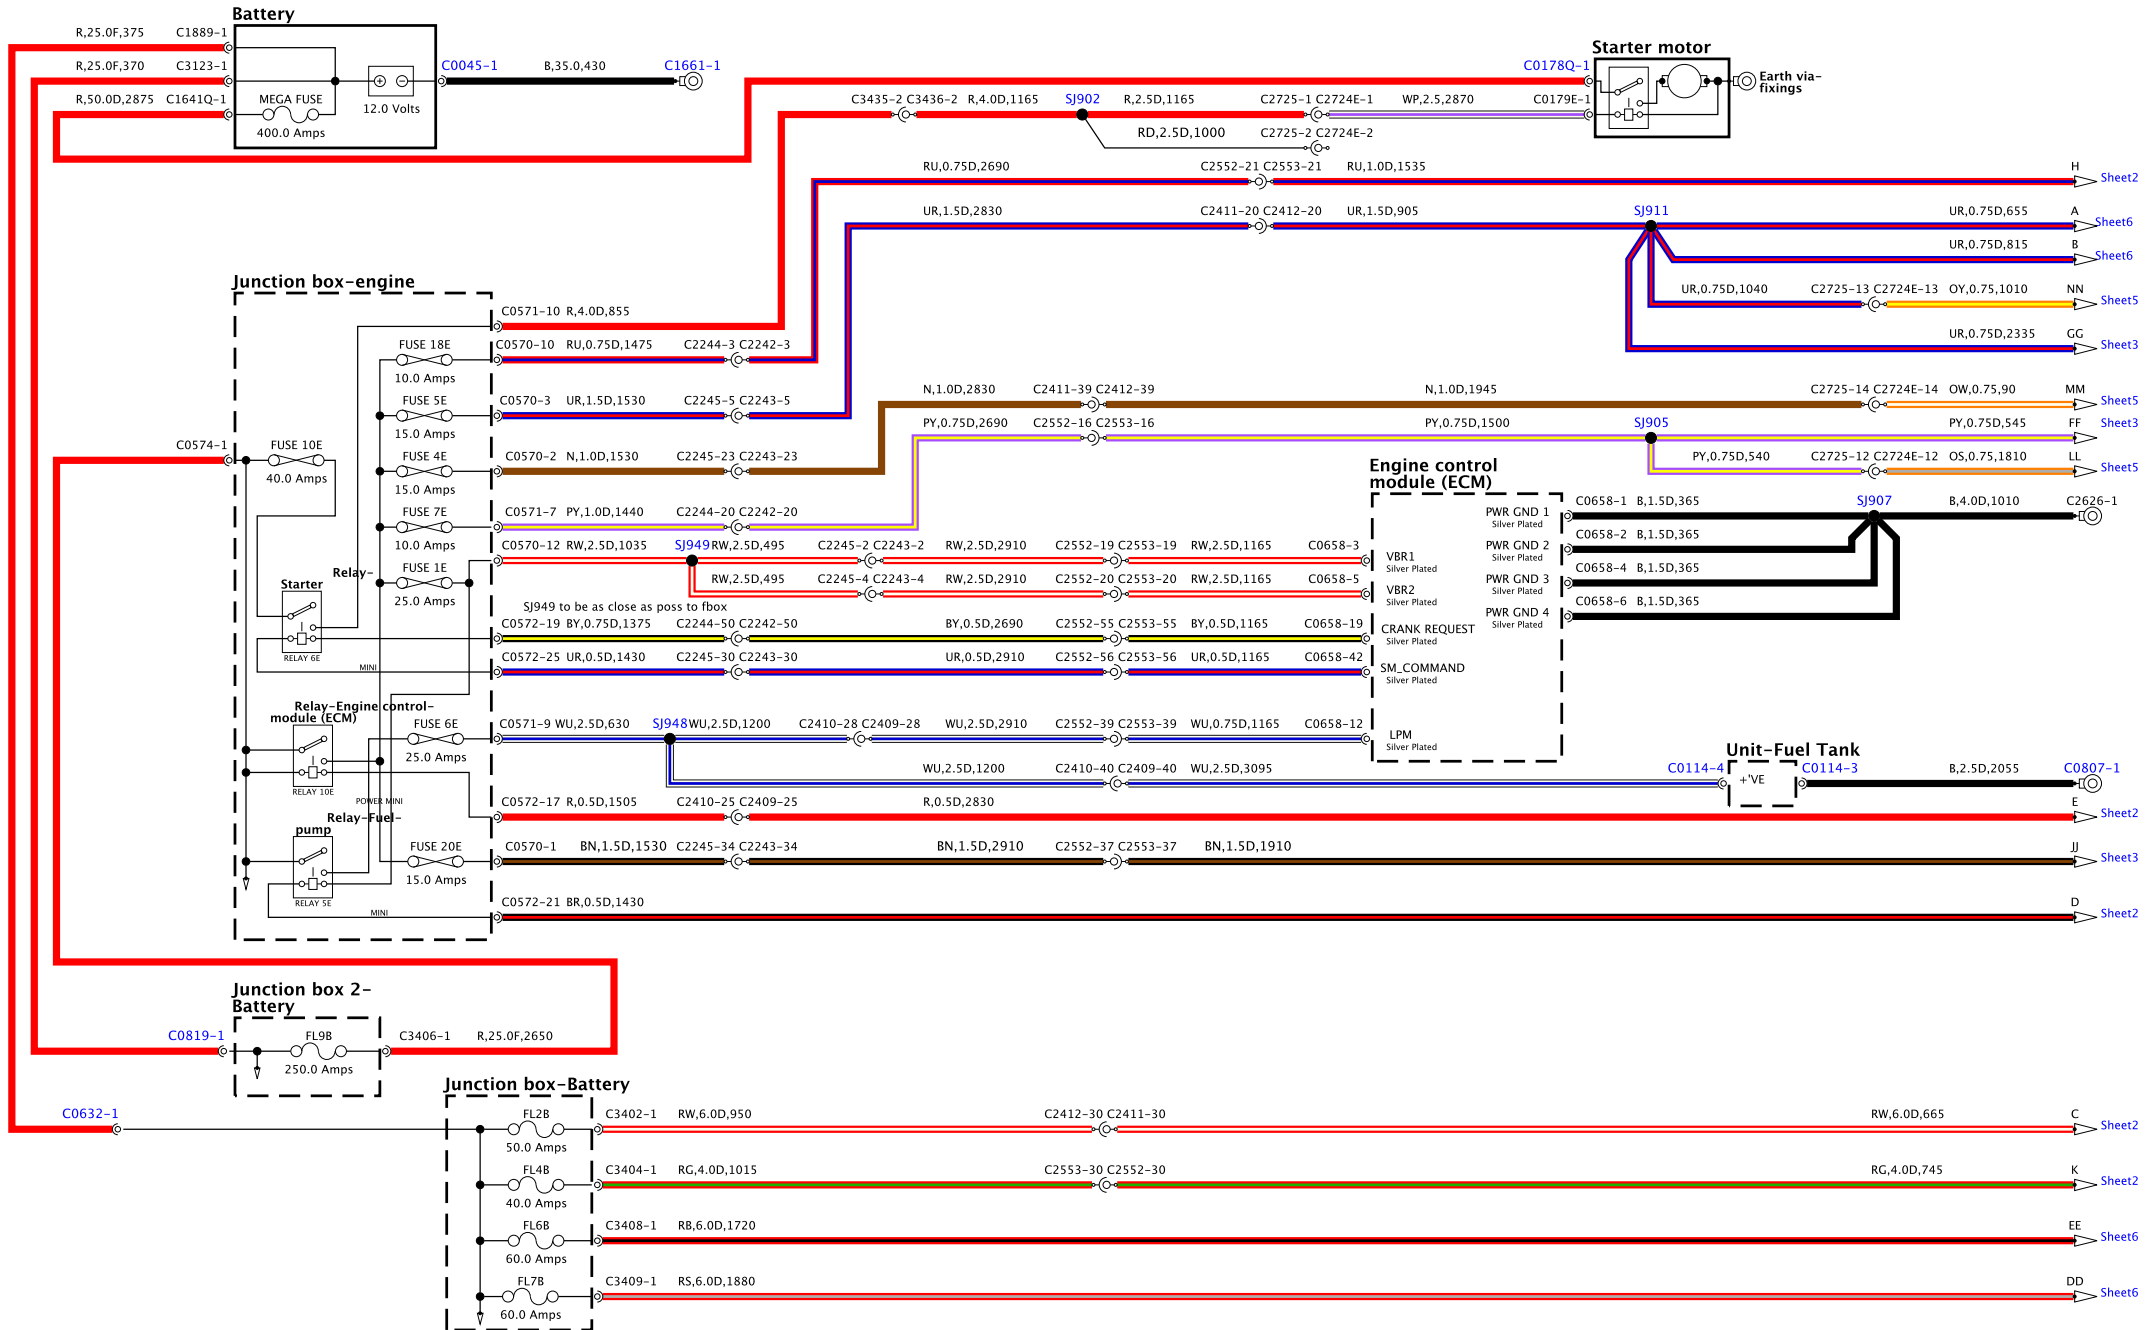


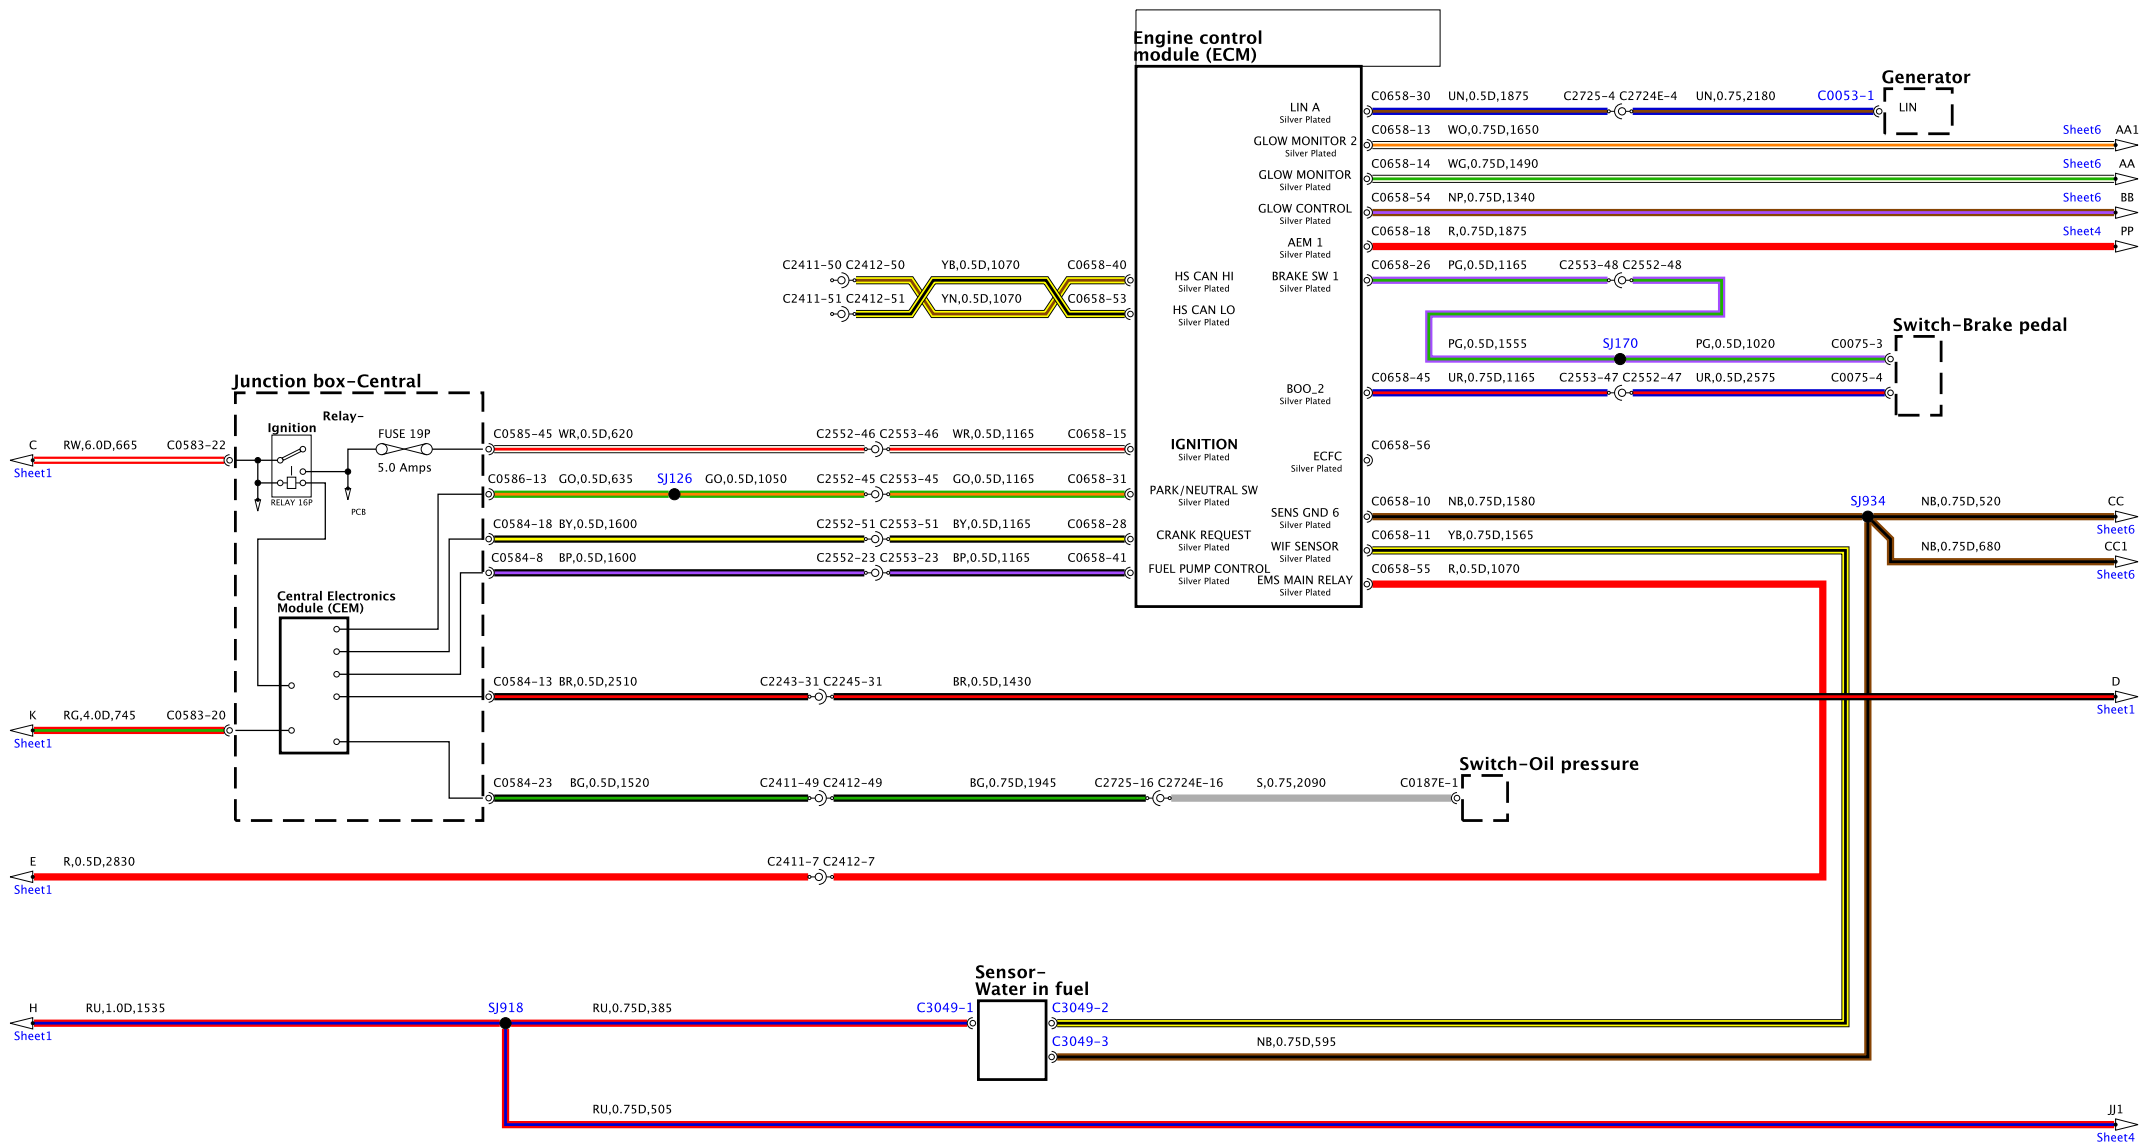

BH42-20032-1-A-03-00-Service 0.322-11MY-0581

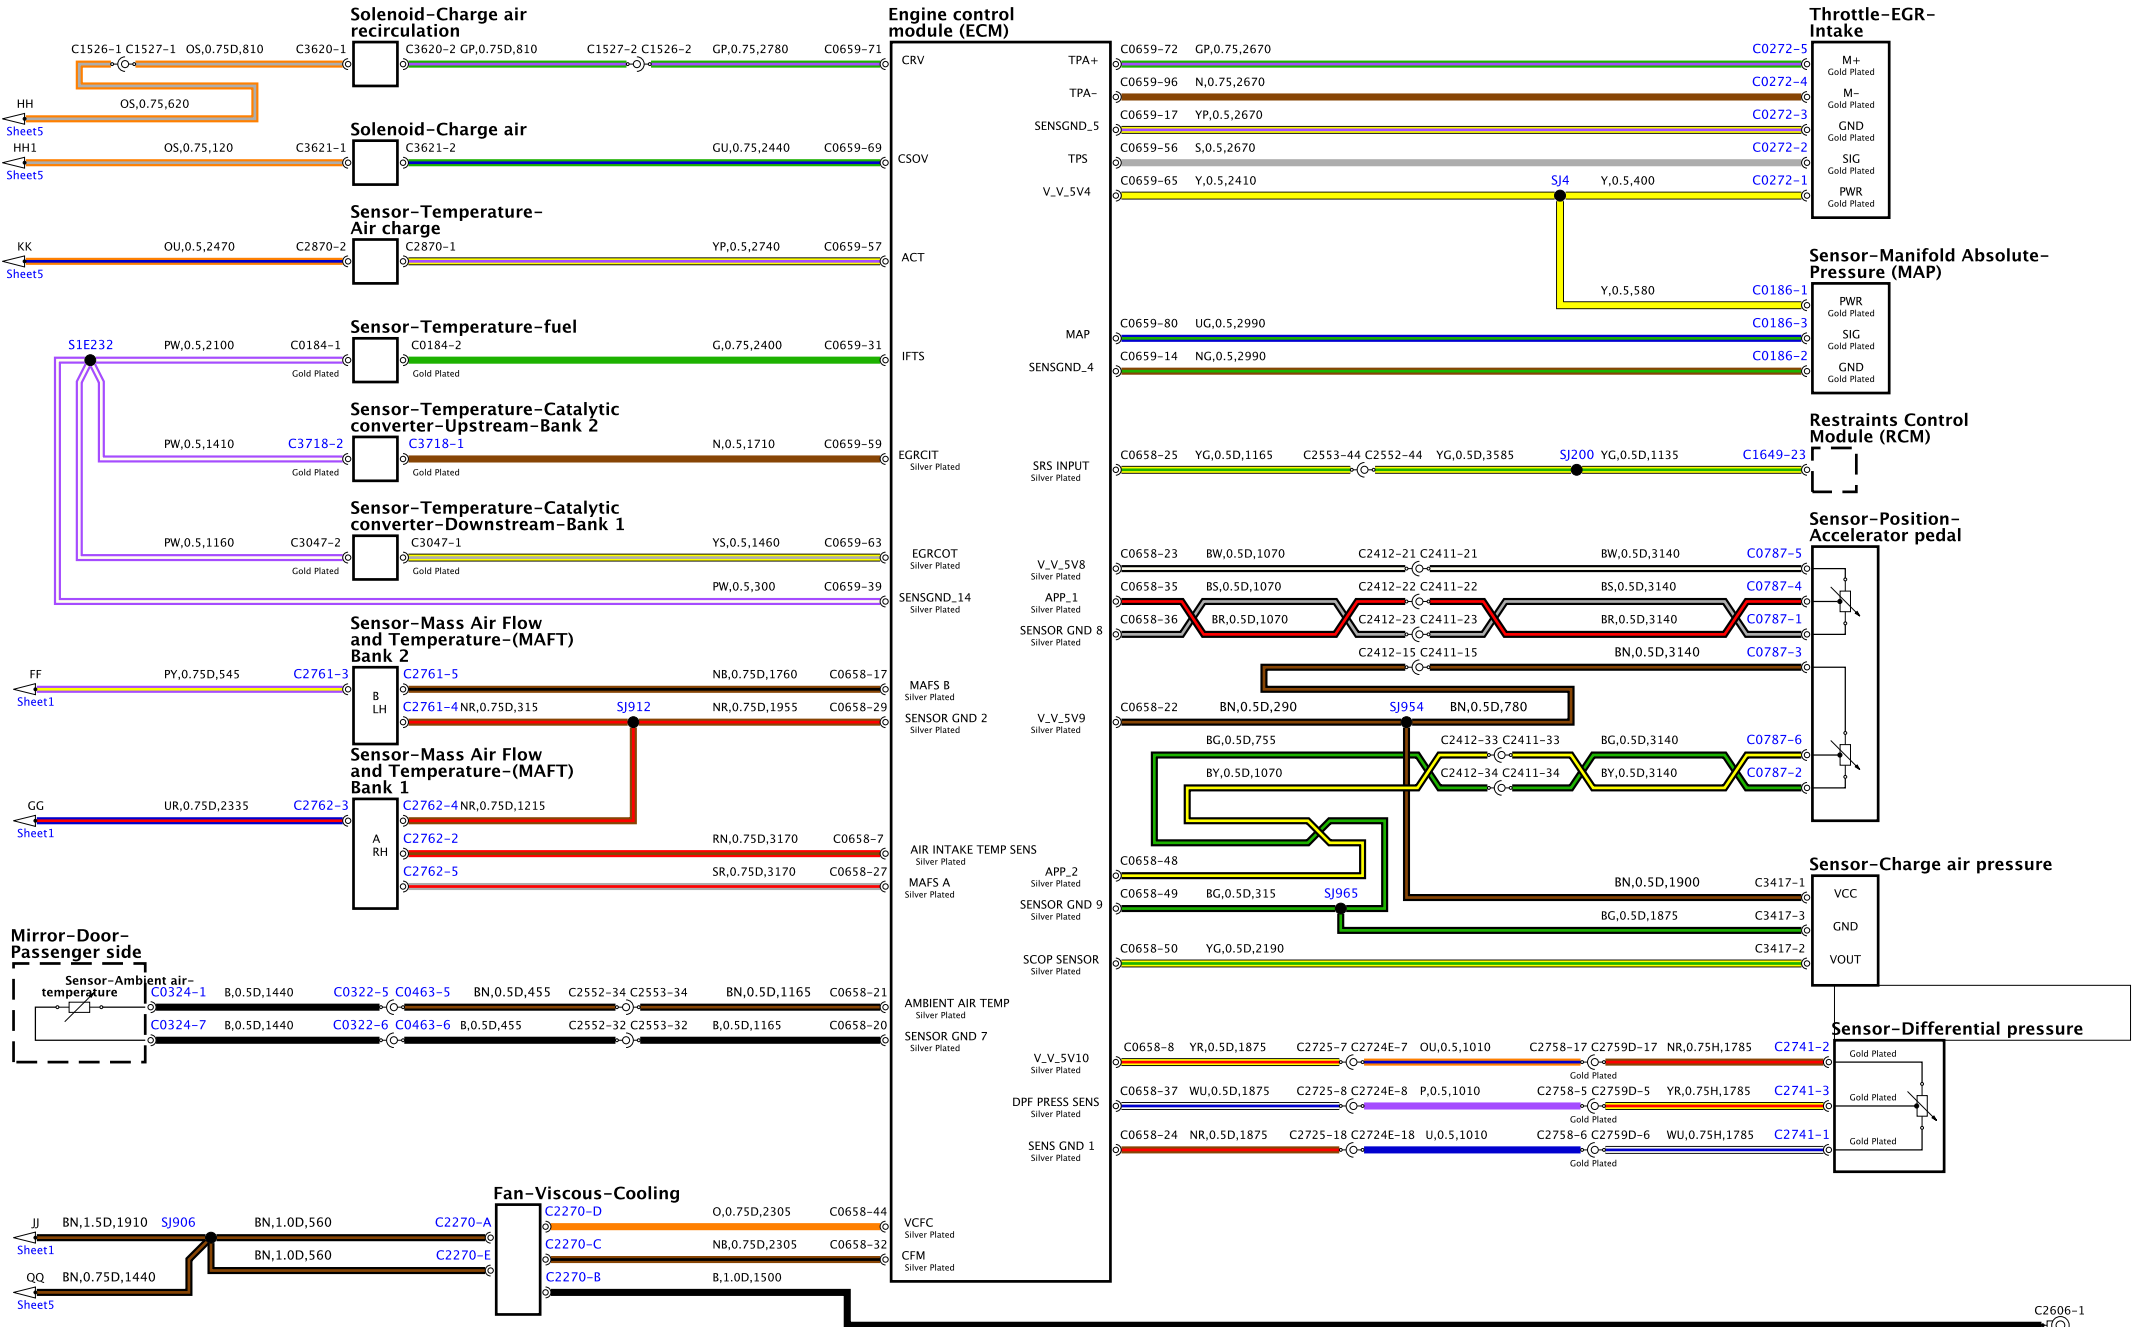


BH41-20032-1-A-04-06-Service (0322-11M7-008)

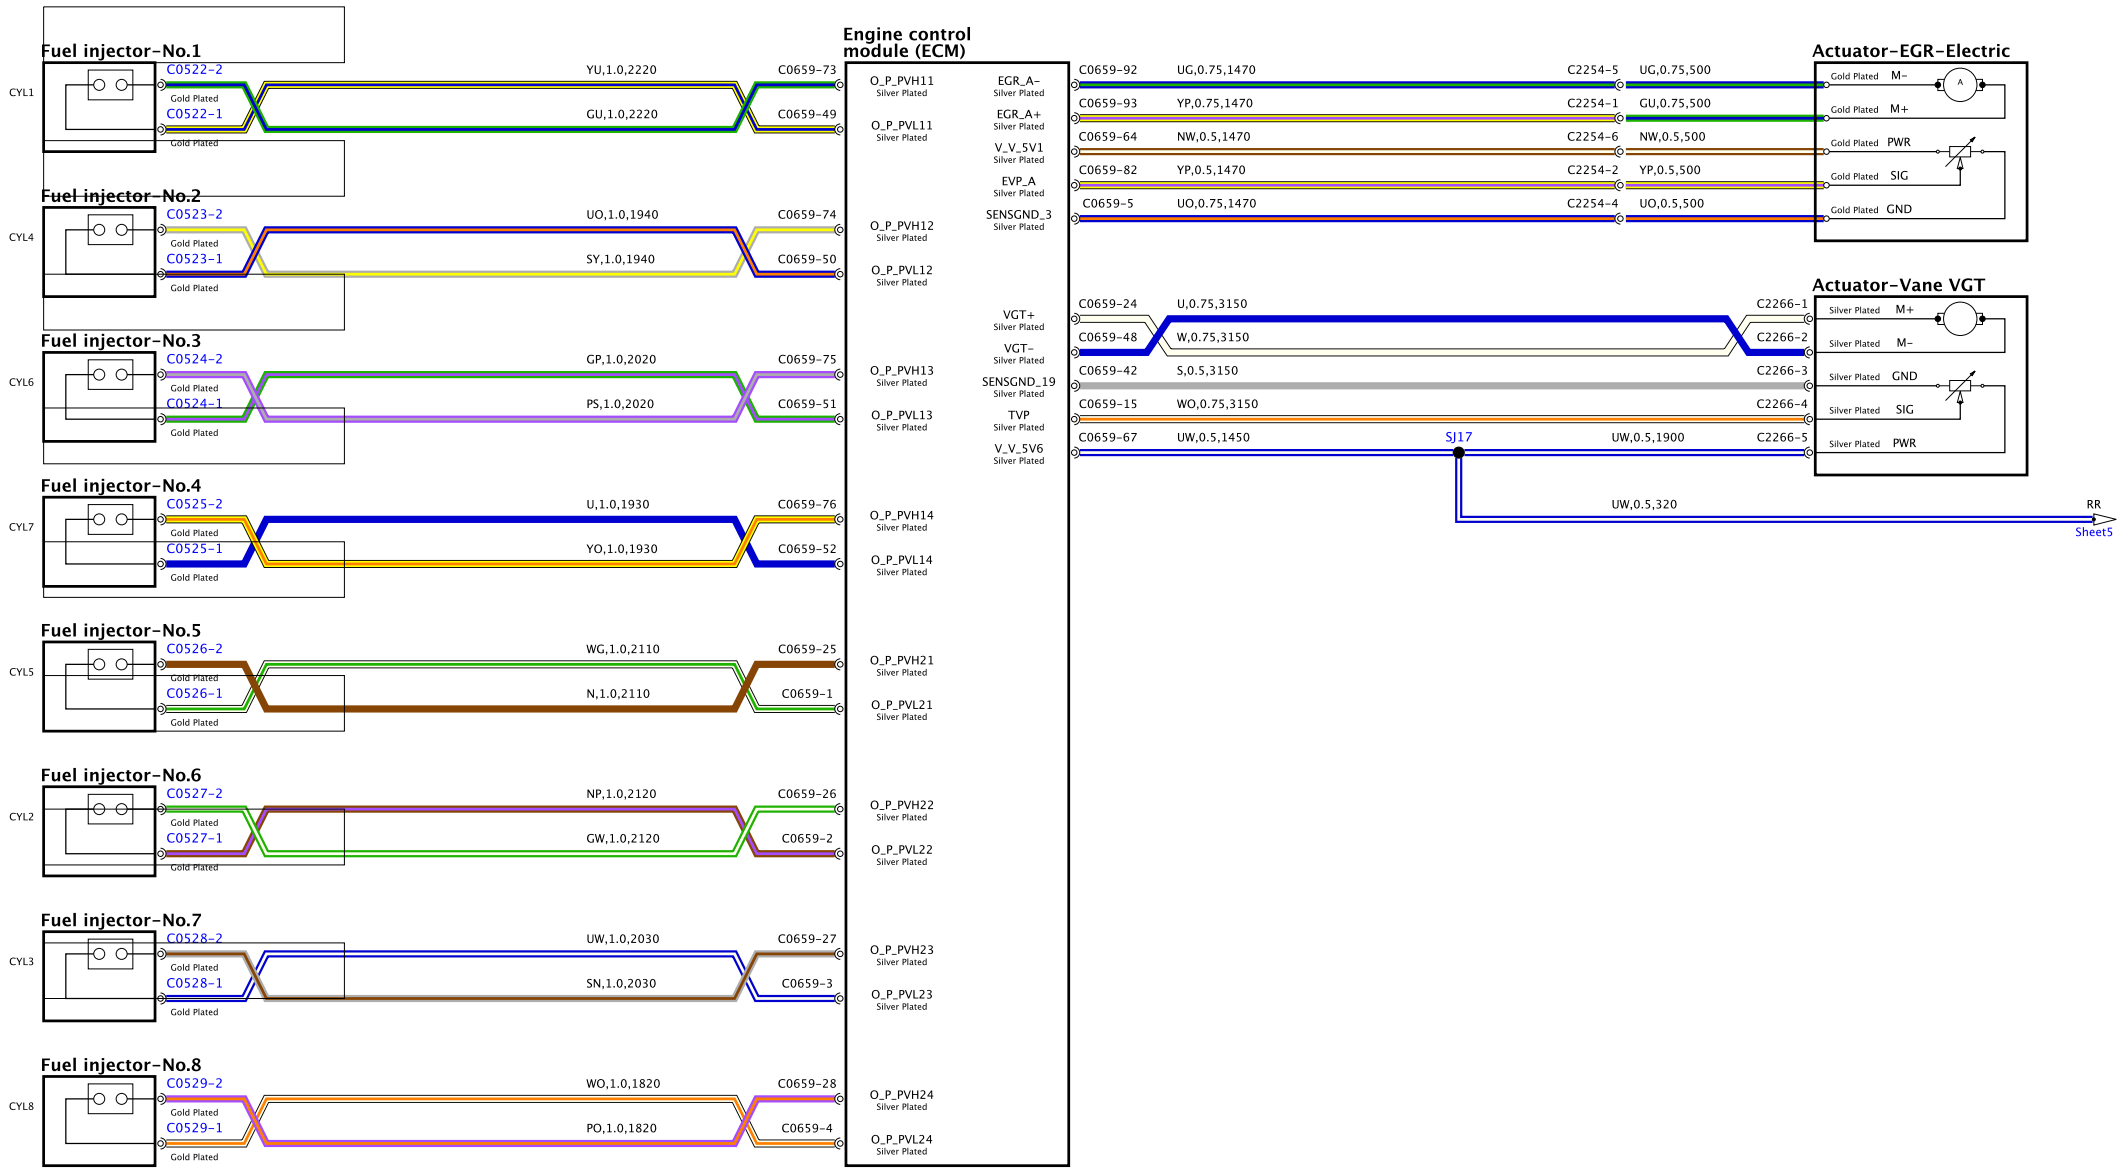


BH41-70022-1-A-05-06-Service (022-11M7-000)

 
Sensor-Temperature-DPF-Outlet



 
Sensor-Temperature-Pre-catalytic converter





 
Sensor-Temperature-Catalytic converter-Downstream











 
Sensor-Outlet temperature-Fixed turbocharger




Sensor-Heated oxygen (HO2S)

  
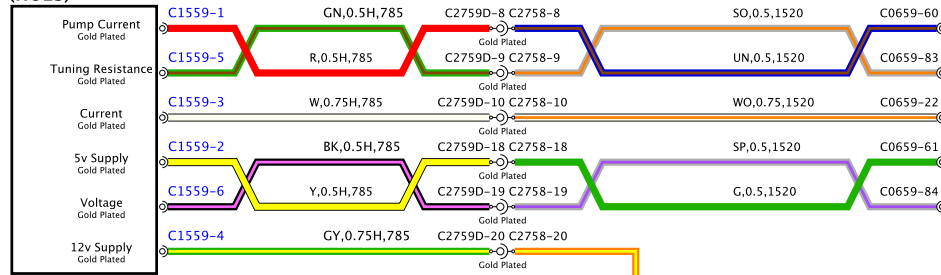


Engine control module (ECM)

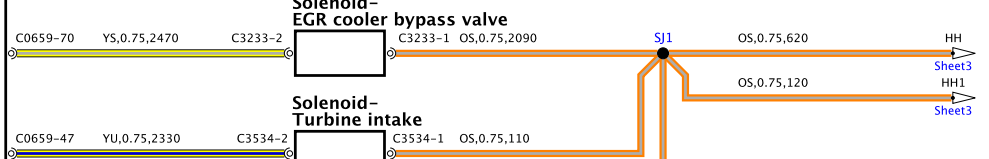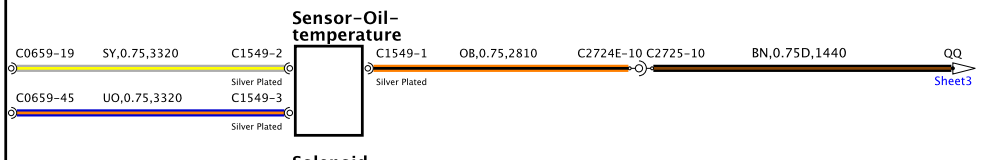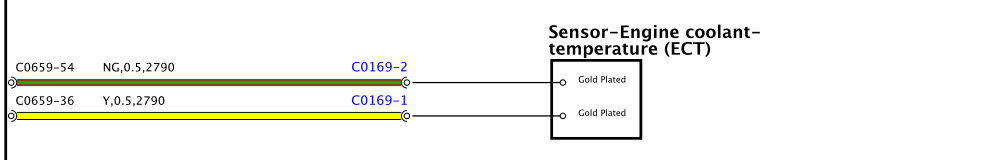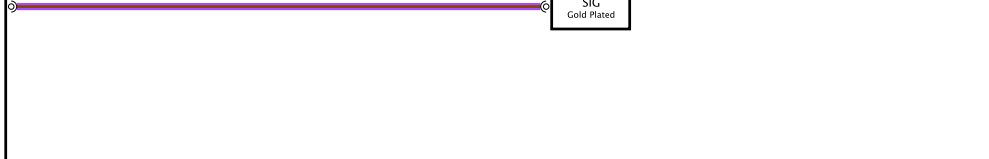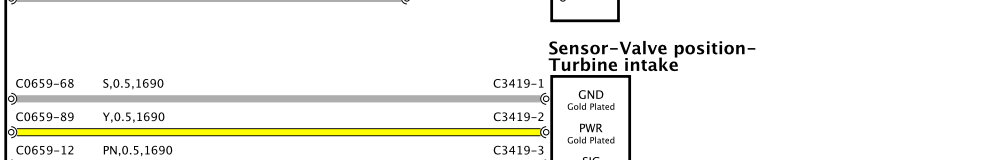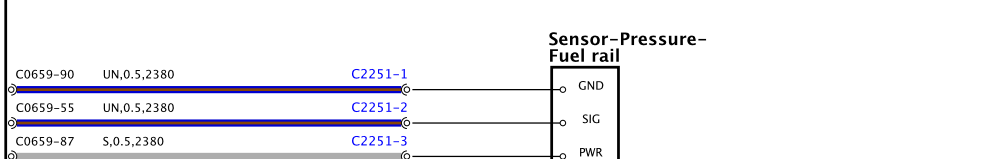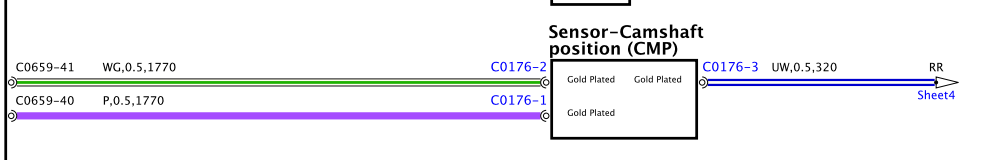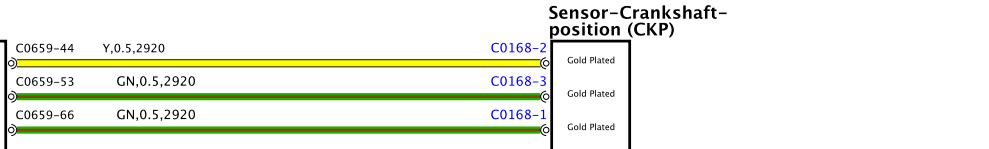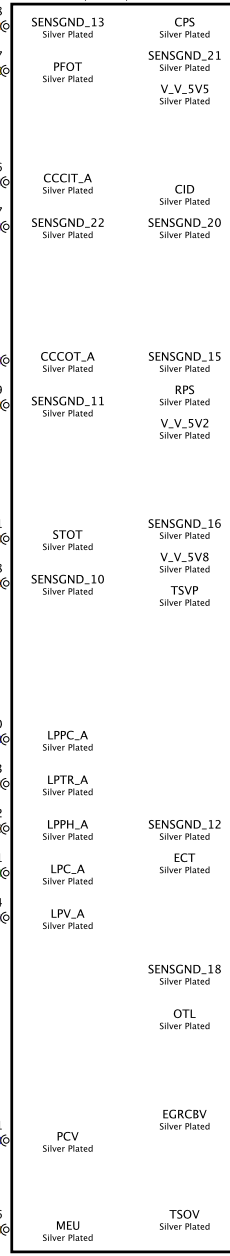

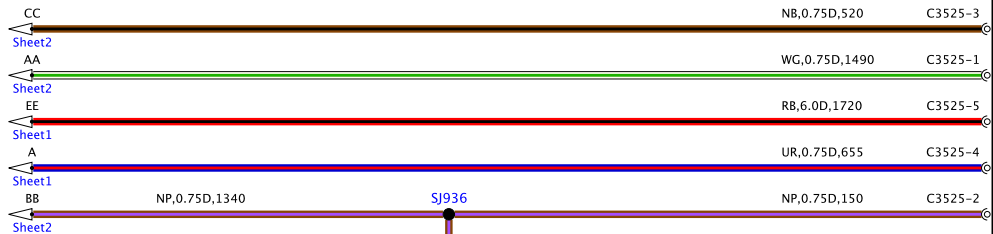

Module-Glow plug control

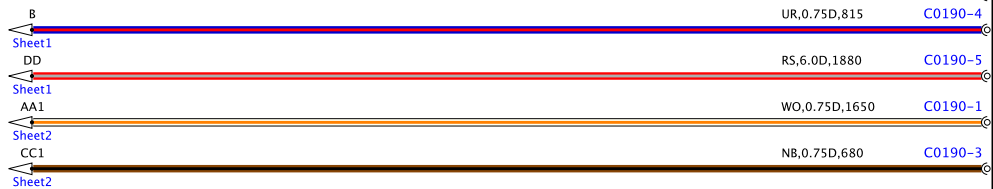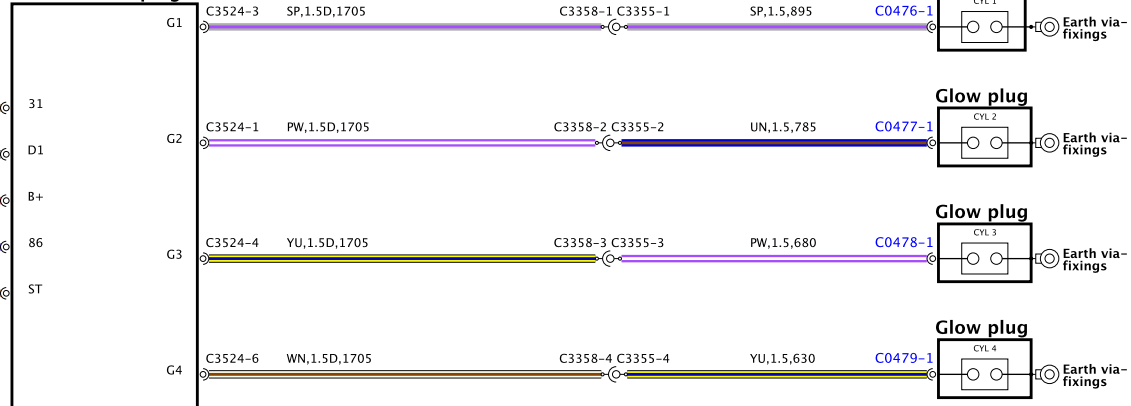

Module-Glow plug control

