

Engine Cooling - TDV8 4.4L Diesel - Coolant Expansion Tank

Removal and Installation

Removal



NOTE: Removal steps in this procedure may contain installation details.

1.




WARNING: Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Cooling System Partial Draining, Filling and Bleeding](#) (303-03A Engine Cooling - TDV8 4.4L Diesel, General Procedures).

3. Refer to: [Air Cleaner RH](#) (303-12A Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).


4.

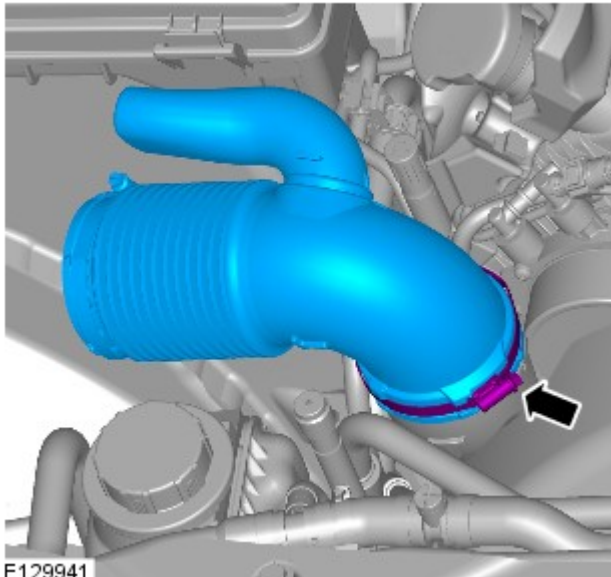



5.




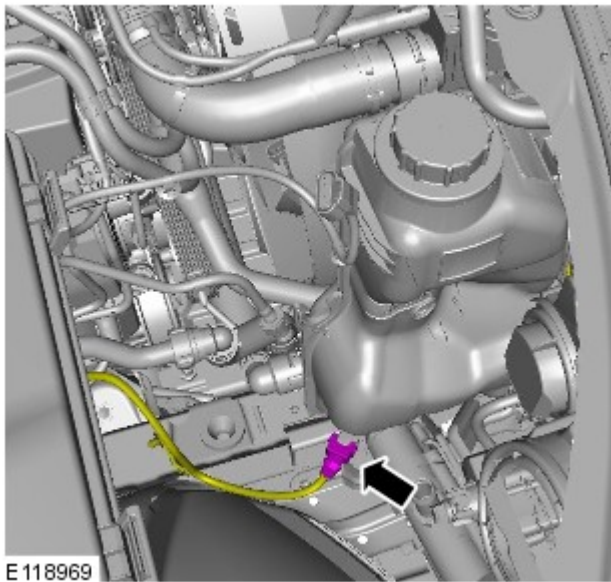
CAUTION: Be prepared to collect escaping coolant.

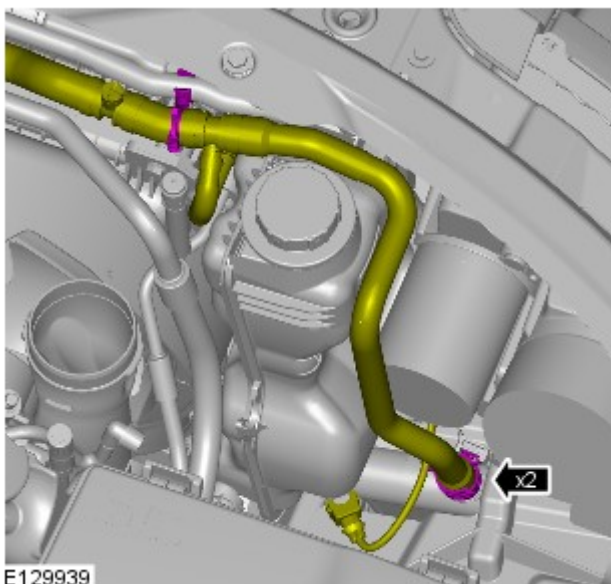

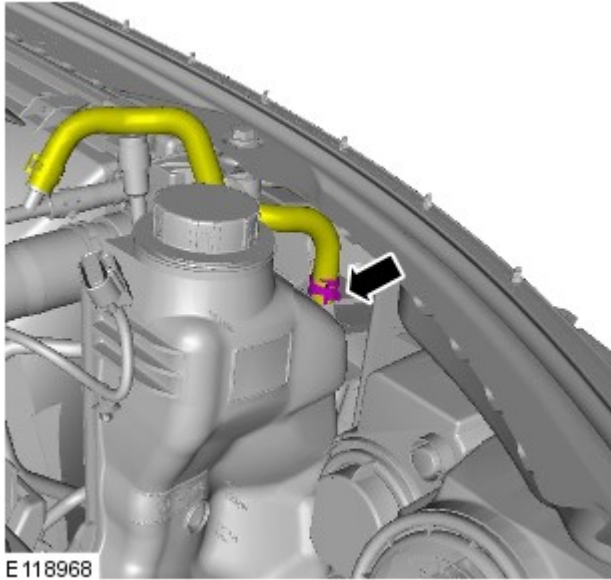



6.  **CAUTION:** Be prepared to collect escaping coolant.

 **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.



7.  **NOTE:** Some variation in the illustrations may occur, but the essential information is always correct.

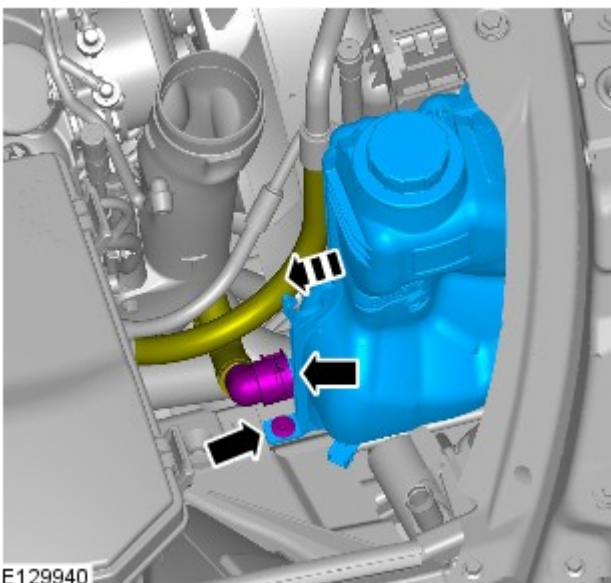

8.  **CAUTION:** Be prepared to collect escaping coolant.

Torque: 9 Nm

Installation

1. To install reverse the removal procedure.