PUBLISHED: 08-SEP-2017 2018.0 RANGE ROVER (LG), 205-02

REAR DRIVE AXLE/DIFFERENTIAL

DIFFERENTIAL DRAINING AND FILLING (G2172806)

GENERAL PROCEDURES

41.20.04	TRANSFER GEARBOX DRAIN AND REFILL	ALL DERIVATIVES	0.20	USED WITHINS	
51.25.02	REAR AXLE – DRAIN AND REFILL	ALL DERIVATIVES	0.30	USED WITHINS	

PART(S)

STEP	PART NAME	QUANTITY
Activation Step 5 Rear differential drain plug		1
Activation Step 7	Rear differential fill plug	1

ACTIVATION

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Electric rear differential shown. Open rear differential similar.
- Removal steps in this procedure may contain installation details.
- Some components shown removed for clarity.


WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.




- Discard the sealing plug.
- Position a container to collect spillage.

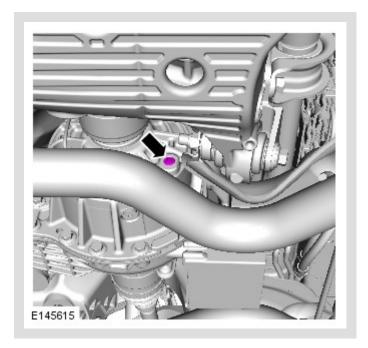

Clean the area around the fluid filler plug.

∧ NOTE:

Discard the sealing plug.

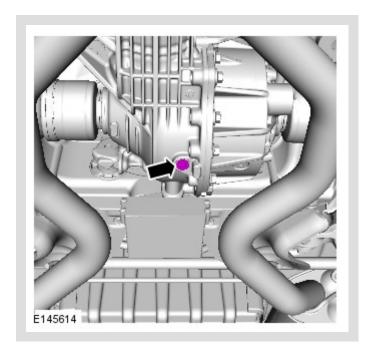


Drain the differential fluid.

4. Clean the area around the fluid drain plug.

5



Install a new sealing plug.

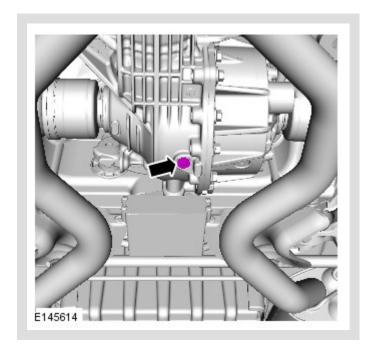


Renew Part: Rear differential drain plug Quantity: 1.

Torque: 30Nm

Fill the rear differential, until a thin thread of fluid runs from the filler hole.

∧ NOTE:

Install a new sealing plug.

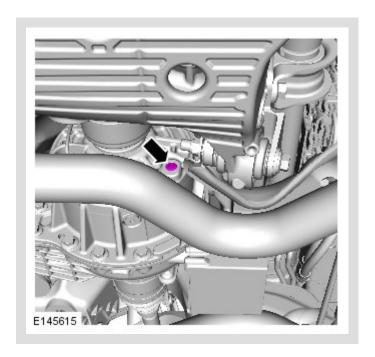

Renew Part: Rear differential fill plug Quantity: 1.

Torque: 30Nm