

2016.0 RANGE ROVER (LG), 413-09

WARNING DEVICES

BLINDSPOT MONITORING SENSOR LH [G1606992]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Rear Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

4.

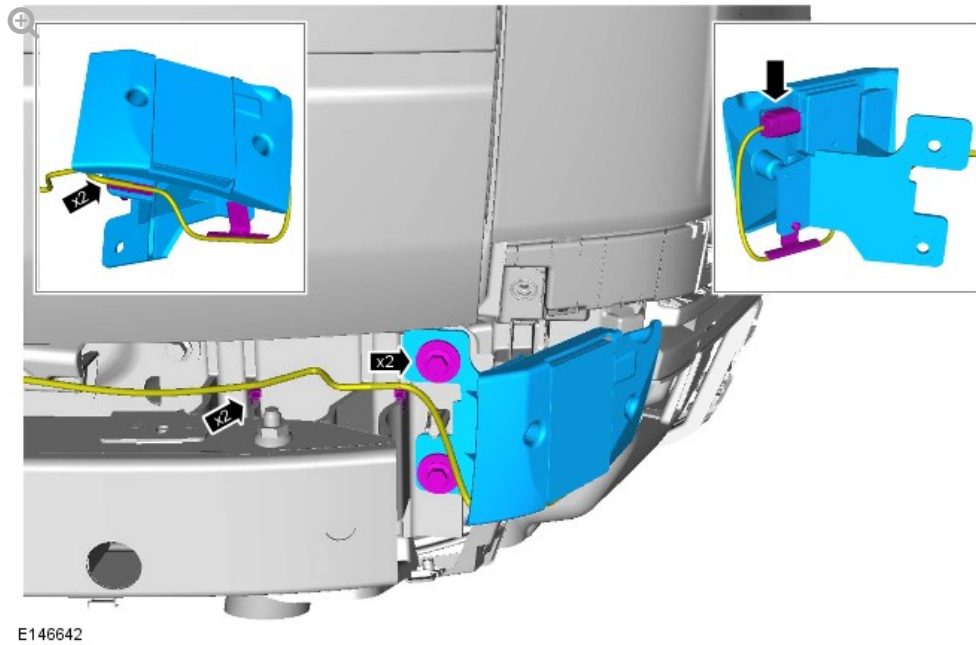

Torque: 55 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure both the left and right side Blindspot Monitoring Sensors using Land Rover approved diagnostic equipment.