

L405 (LHD) CONNECTOR QUICK REFERENCE GUIDE


13MY Job1

**Document Objective:** To provide basic connector location information only, including in-lines and grounds.

**Note:** A RHD version of this document will not be produced. For detailed connector information (including RHD), refer to the Electrical Reference Library (ERL) at the EDS web site:  
<http://esr.gaydon.landrover.ford.com/eds/jlrcircuits>.

**Note:** For improved clarity some harnesses have been omitted completely e.g. engines, seats, steering, climate control and some link leads.

All paper copies are uncontrolled.

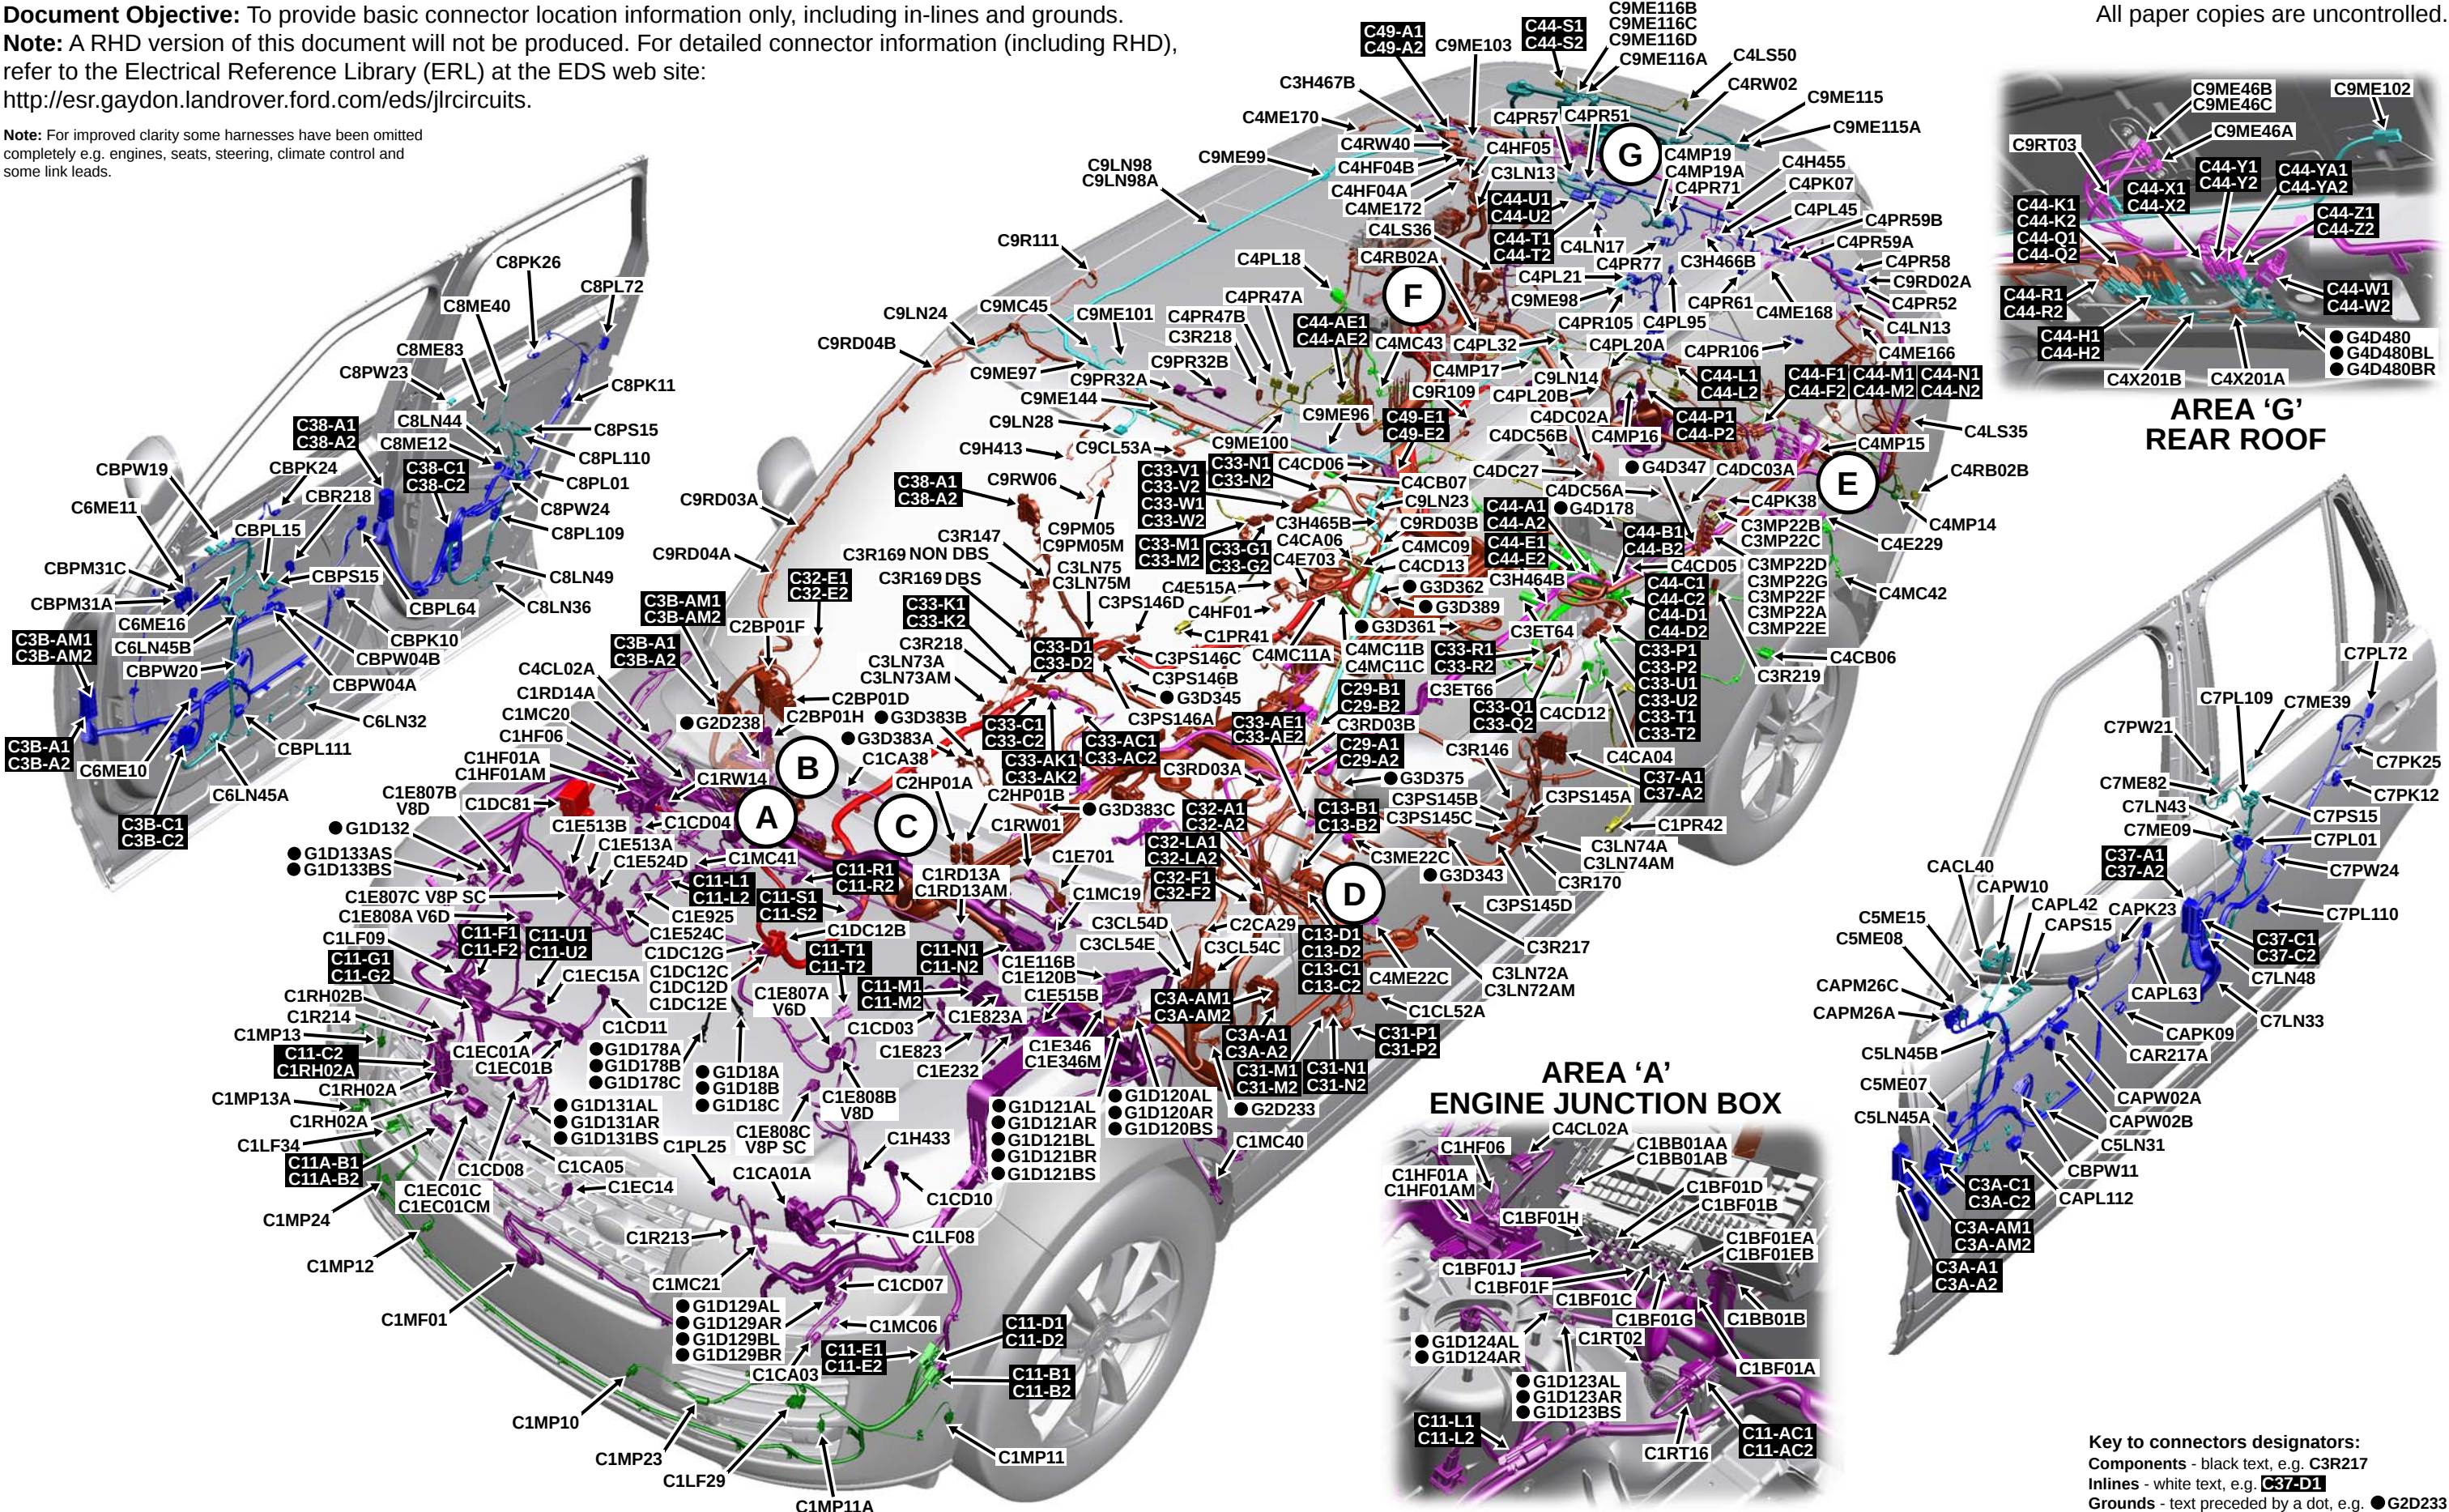


# L405 (LHD) CONNECTOR QUICK REFERENCE GUIDE

# 13MY Job 1


All paper copies are uncontrolled

## AREA 'C'

### IP AND CONSOLES

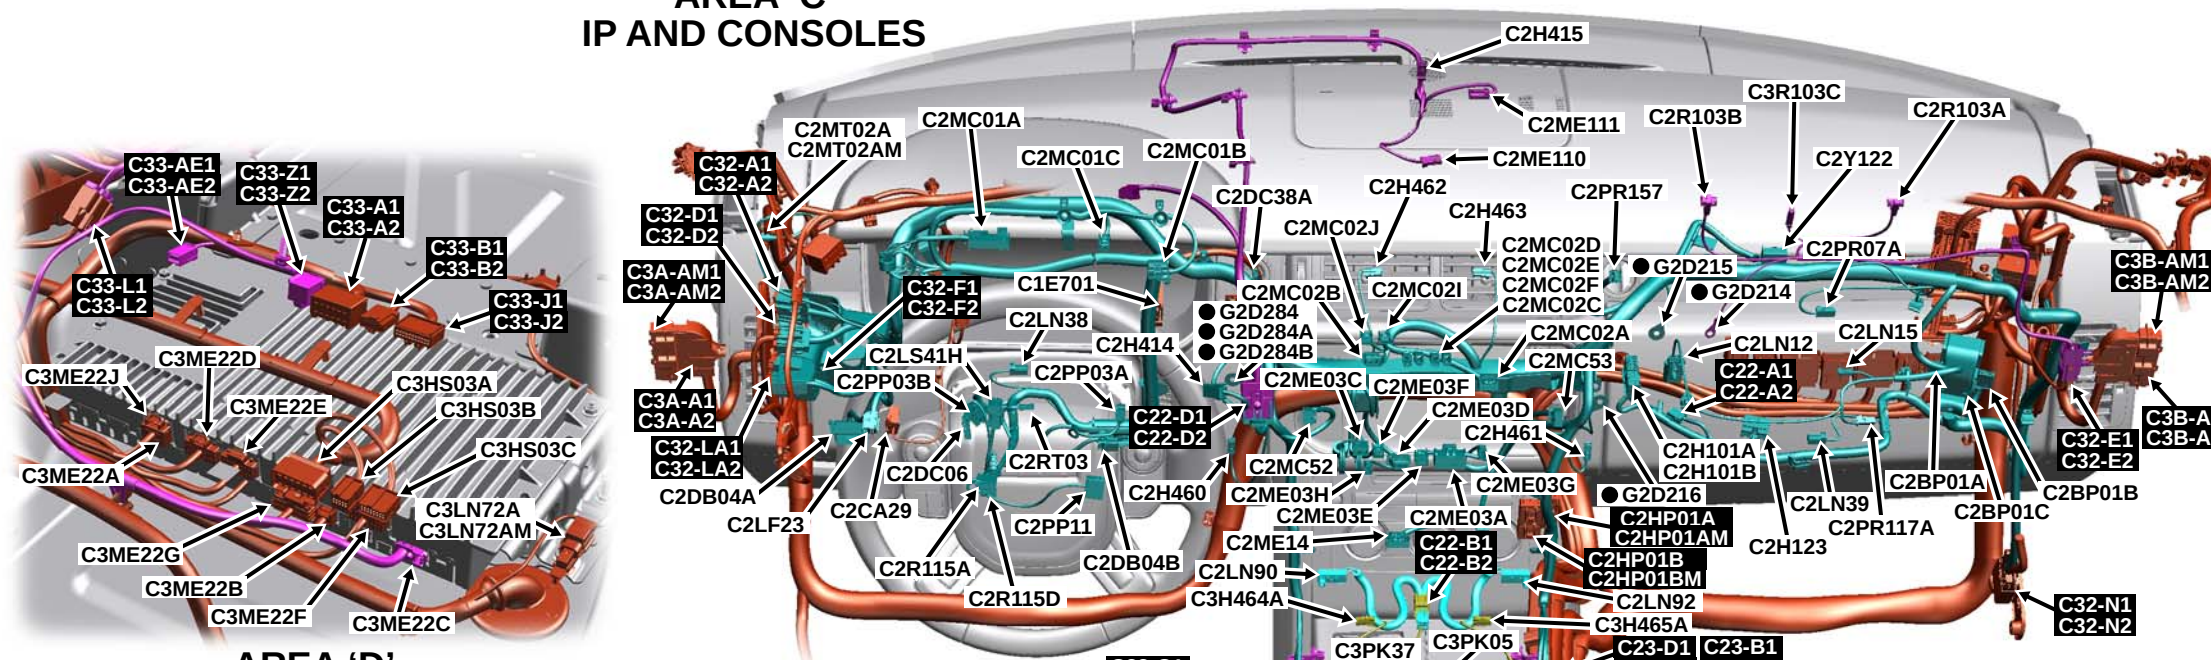



**AREA 'D'**  
**BELOW FRONT LEFT SEAT**

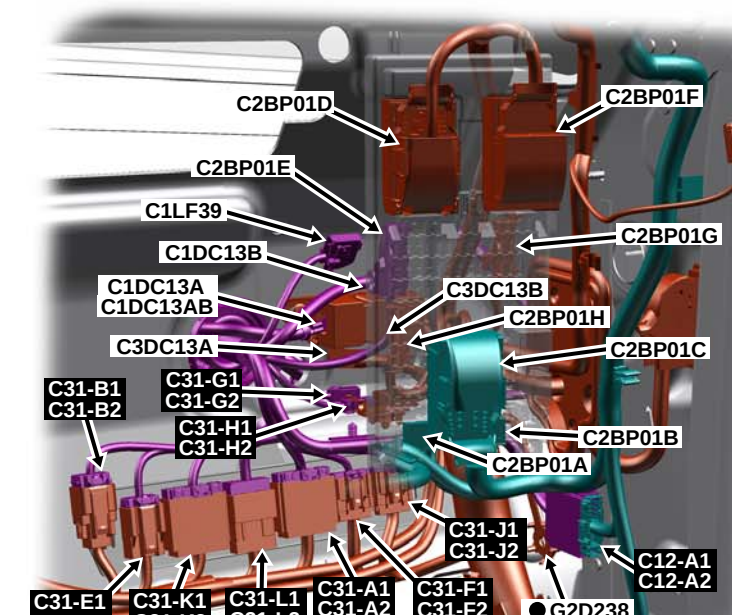

**AREA 'B'**  
**CENTRAL JUNCTION BOX**

## AREA 'E'

### REAR LEFT QUARTER

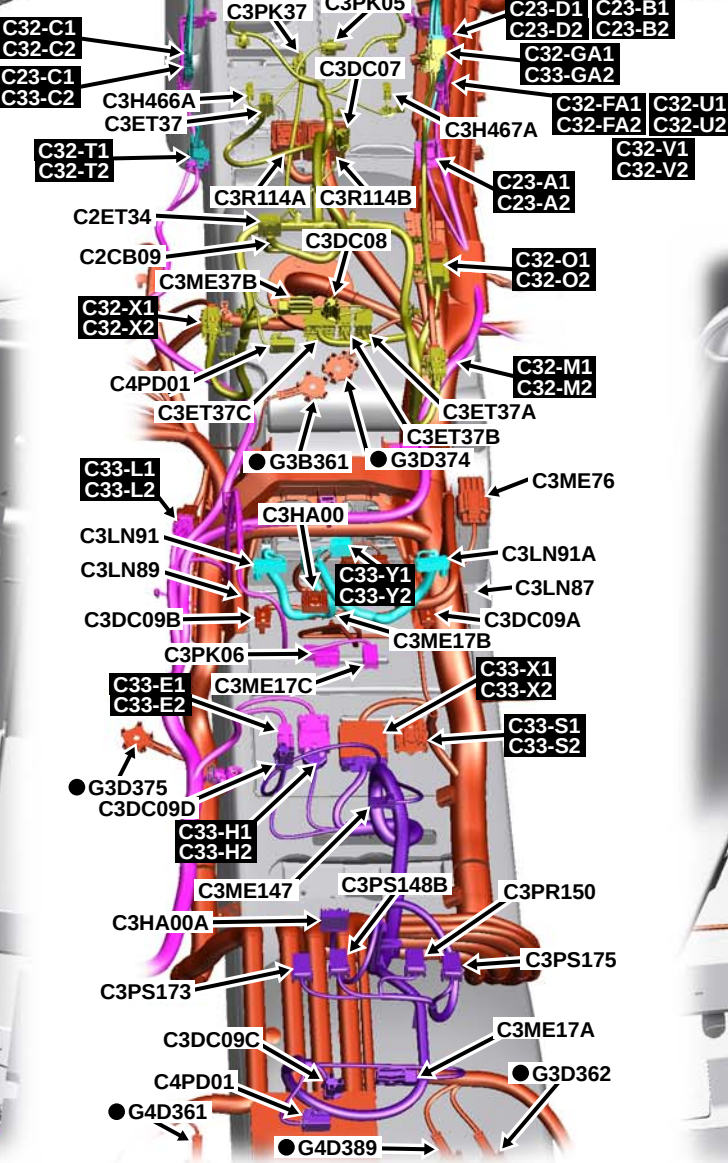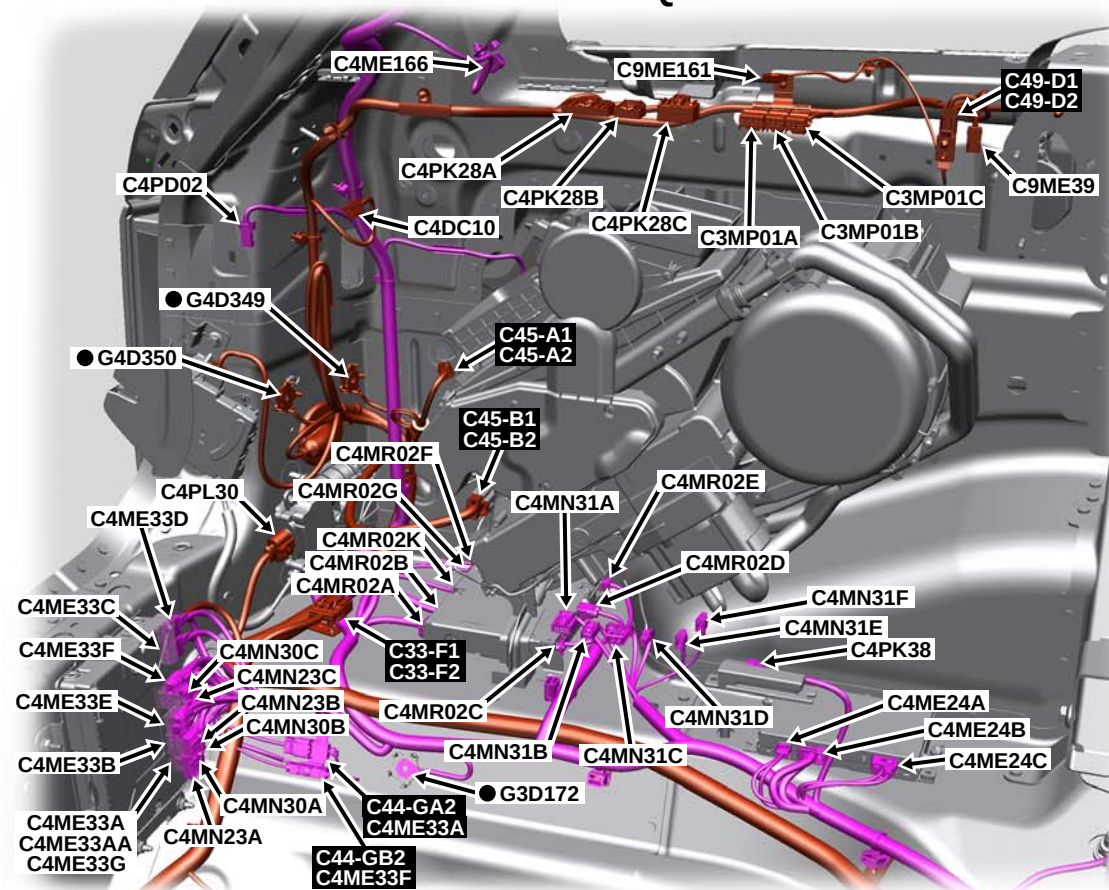

## AREA 'F'

### REAR RIGHT QUARTER

