

2016.0 RANGE ROVER (LG), 501-11

GLASS, FRAMES AND MECHANISMS

WINDSHIELD MOULDING (G1549849)

REMOVAL AND INSTALLATION

REMOVAL


CAUTION:

Make sure to protect the paintwork.

NOTE:


Left-hand shown, right-hand similar.

1.

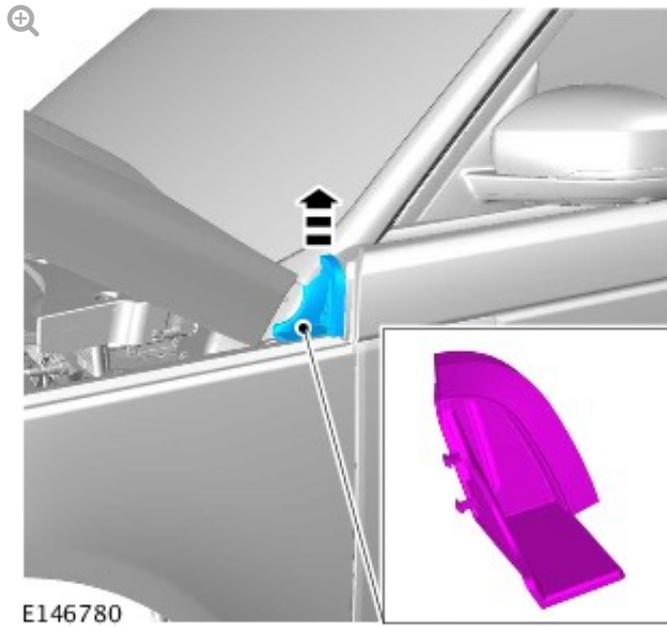

Open the hood.

2.

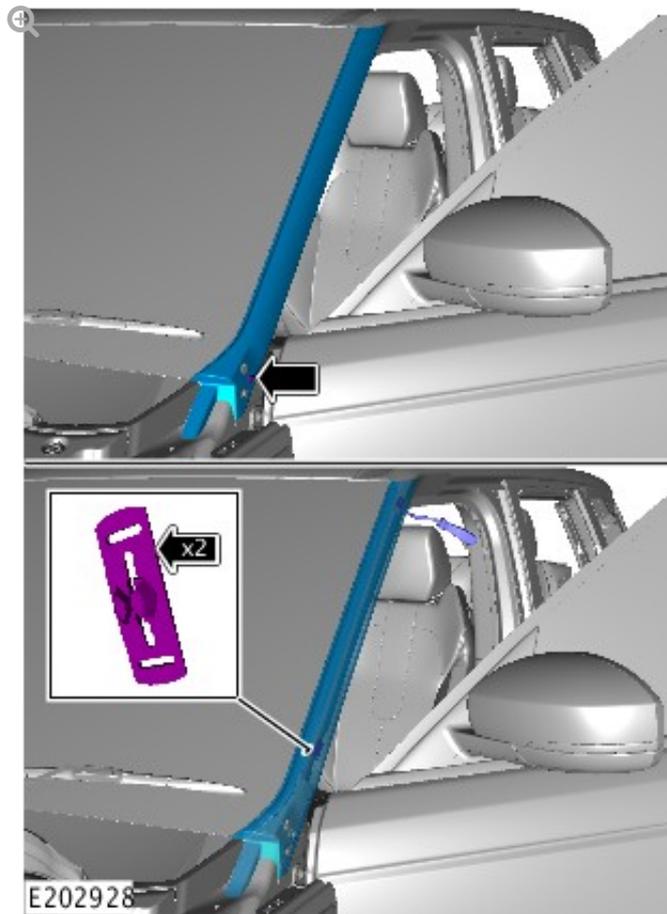


Remove the trim panel using a suitable trim removal tool.

3.

CAUTION:

Protect the paintwork during this operation.

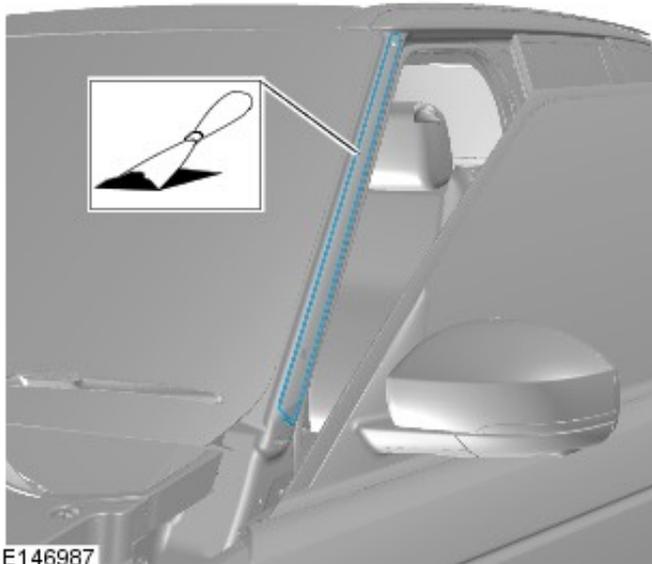

INSTALLATION


1.

CAUTION:


Make sure that the mating faces are clean and free of foreign material.

NOTE:

The new adhesive seal must be installed between the alignment lines marked on the frame.

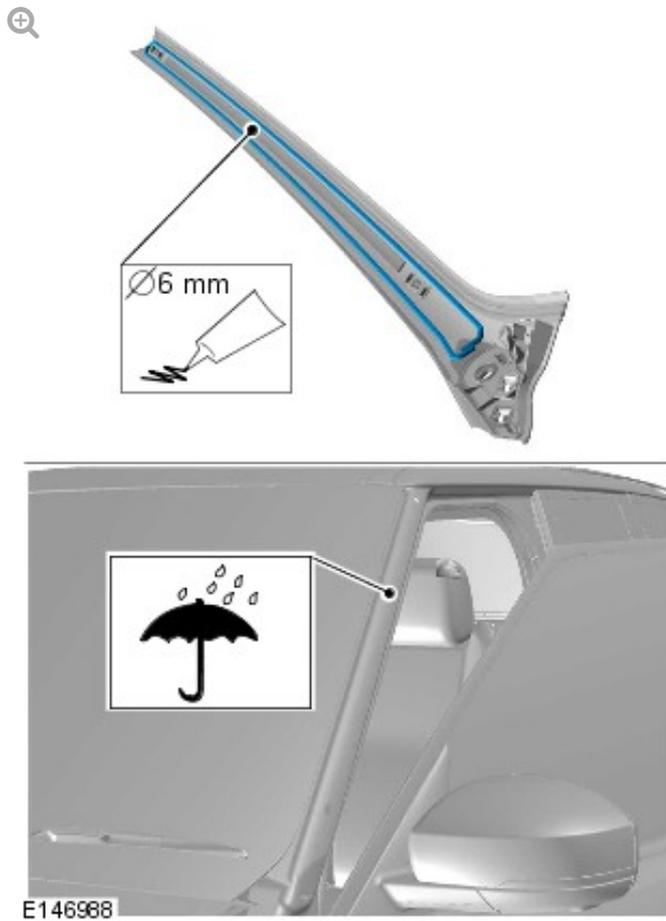

Prepare the PU adhesive in accordance with the instructions included with the PU adhesive kit.

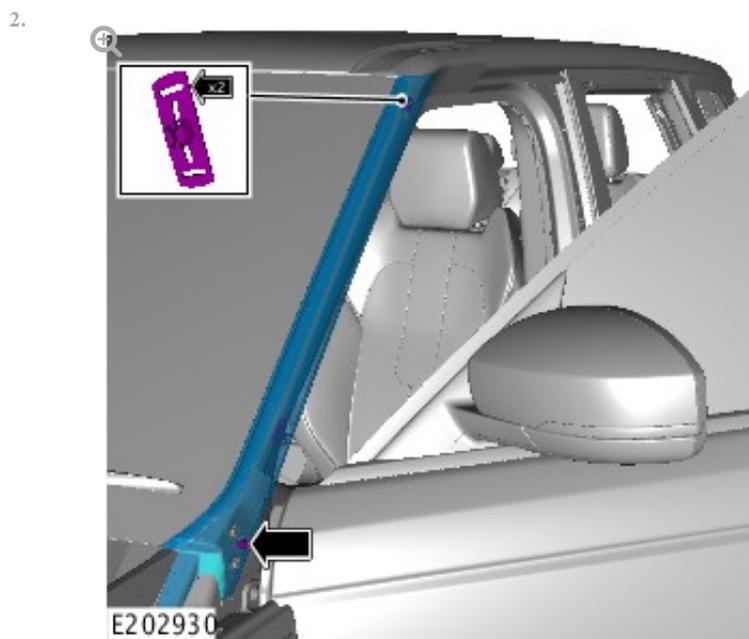


- Fit the A-pillar and tighten the 1 bolt to secure in position and secure the 2 clips.

Torque: 2.5 Nm

- Using suitable tape to secure the A-pillar trim in position and leave for 4 hours to fully cure.
- Make sure the doors are not repeatedly opened and closed during this period.

3.

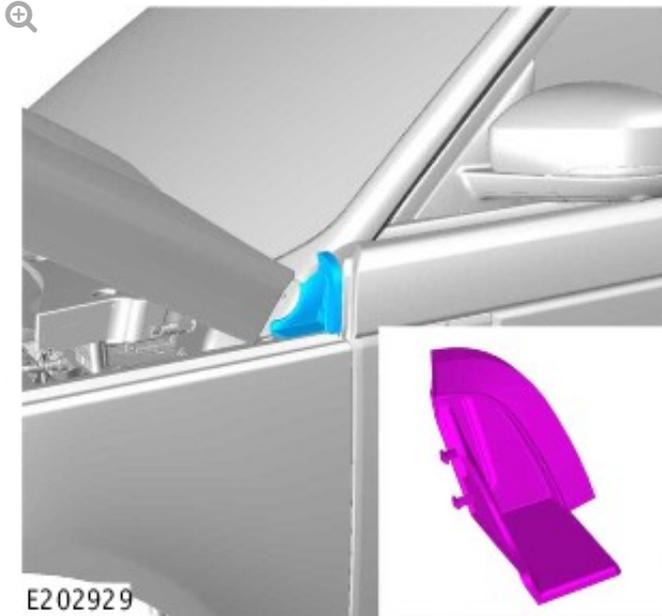

Fit the trim bracket.